


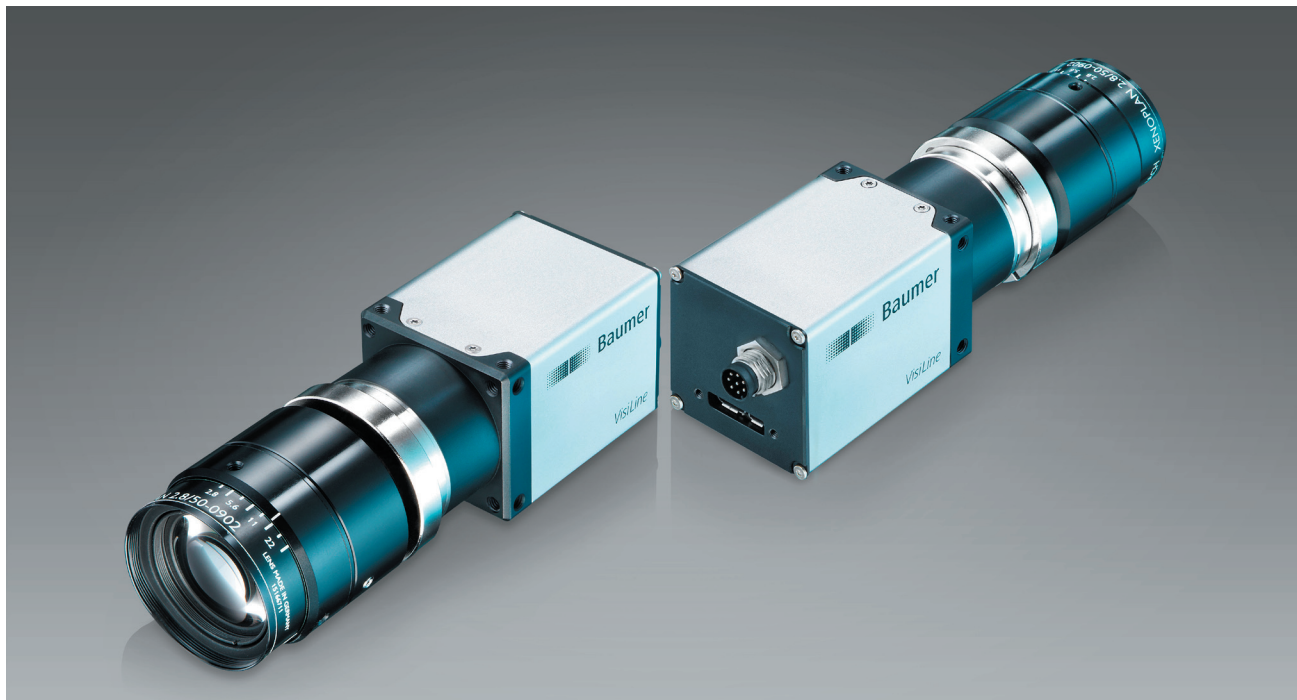

User's Guide

VisiLine cameras (USB3 Vision™)

Document Version: v1.0
Release: 24.09.2014
Document Number: 11135443



Table of Contents

1. General Information	6
2. General safety instructions	7
3. Intended Use.....	7
4. General Description	8
5. Camera Models.....	9
6. Installation	10
6.1 Lens mounting	10
6.2 Environmental Requirements.....	10
6.2.1 Heat Transmission.....	11
7. Pin Assignment	12
7.1 USB 3.0 Interface.....	12
7.2 Digital IOs	12
7.2.1 LED Signalling	13
8. Product Specifications	14
8.1 Spectral Sensitivity for Baumer VLU Cameras	14
8.2 Field of View Position.....	15
8.3 Acquisition Modes and Timings.....	16
8.3.1 Free Running Mode.....	16
8.3.2 Fixed-Frame-Rate Mode	17
8.3.3 Trigger Mode	18
8.3.4 Advanced Timings for USB 3.0 Vision™ Message Channel	22
8.4 Software	24
8.4.1 Baumer GAPI	24
8.4.2 3 rd Party Software	24
9. Camera Functionalities	25
9.1 Image Acquisition	25
9.1.1 Image Format	25
9.1.2 Pixel Format	26
9.1.3 Exposure Time.....	28
9.1.4 PRNU / DSNU Correction (FPN - Fixed Pattern Noise)	29
9.1.5 HDR (High Dynamic Range)	30
9.1.6 Look-Up-Table	31
9.1.7 Gamma Correction	31
9.1.8 Region of Interest (ROI)	32
9.1.9 Binning.....	33
9.1.10 Brightness Correction (Binning Correction).....	34
9.1.11 Flip Image.....	35

9.2 Color Processing.....	36
9.3 Color Adjustment – White Balance	36
9.3.1 User-specific Color Adjustment	36
9.3.2 One Push White Balance	37
9.4 Analog Controls.....	37
9.4.1 Offset / Black Level.....	37
9.4.2 Gain	38
9.5 Pixel Correction.....	39
9.5.1 General information.....	39
9.5.2 Correction Algorithm	40
9.5.3 Defectpixellist	40
9.6 Process Interface	41
9.6.1 Digital IOs.....	41
9.6.2 IO Circuits.....	42
9.6.3 Trigger	43
9.6.4 Trigger Source	43
9.6.5 Debouncer	44
9.6.6 Flash Signal.....	44
9.6.7 Timers.....	45
9.6.8 Frame counter	45
9.7 Sequencer.....	46
9.7.1 General Information.....	46
9.7.2 Baumer Optronic Sequencer in Camera xml-file	47
9.7.3 Examples.....	47
9.7.4 Capability Characteristics of Baumer GAPI Sequencer Module	48
9.7.5 Double Shutter	49
9.8 Device Reset.....	49
9.9 User Sets	50
9.10 Factory Settings	51
9.11 Timestamp.....	51
10. Interface Functionalities	52
10.1 Device Information	52
10.2 Baumer Image Info Header (Chunk).....	53
10.3 Message Channel	54
10.3.1 Event Generation	54
11. Start-Stop Behaviour	55
11.1 Start / Stop / Abort Acquisition (Camera).....	55
11.2 Start / Stop Interface	55
11.3 Acquisition Modes	55
11.3.1 Free Running	55
11.3.2 Trigger.....	55
11.3.3 Sequencer	55
12. Cleaning	56
13. Transport / Storage	56
14. Disposal	56

15. Warranty Notes	57
16. Support.....	57
17. Conformity	
17.1 CE	
17.2 RoHS	

1. General Information

Thank you for purchasing a camera from the Baumer range. This User's Guide describes how to connect, set up and use the camera.



Read this manual carefully and observe the notes and safety instructions!

Target group for this User's Guide

This User's Guide is aimed at experienced users who want to integrate camera(s) into a vision system.

Copyright

Any duplication or reprinting of this documentation, in whole or in part, and the reproduction of the illustrations even in modified form is permitted only with the written approval of Baumer. This document is subject to change without notice.

Classification of the safety instructions

In the User's Guide, the safety instructions are classified as follows:

Notice

Gives helpful notes on operation or other general recommendations.



Caution



Indicates a potentially dangerous situation. If the situation is not avoided, slight or minor injury could result or the device may be damaged.

2. General safety instructions



Caution



Heat can damage the camera. Heat must be dissipated adequately to ensure that the temperatures do not exceed the values (see Heat Transmission).

As there are numerous options for installation, Baumer does not specify a specific method for proper heat dissipation.



Caution



Device heats up during operation.

Skin irritation possible.

Do not touch the camera during operation.



Caution



Observe precautions for handling electrostatically sensitive devices!


3. Intended Use

The camera is used to capture images that can then be transferred over a USB 3.0 interface to a PC.

Notice

Use the camera only for its intended purpose! For any use that is not described in the technical documentation poses dangers and will void the warranty. The risk has to be borne solely by the unit's owner.

4. General Description

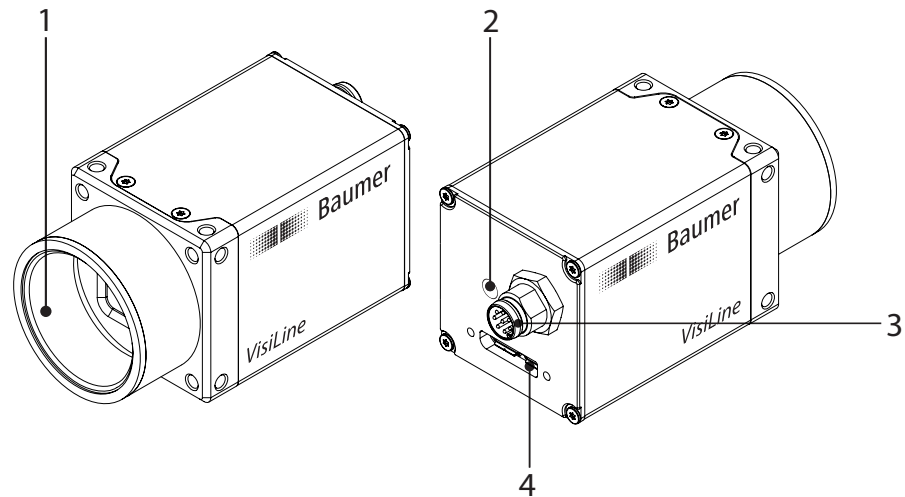


No.	Description	No.	Description
1	Lens mount (C-Mount)	4	USB 3.0 port
2	LED		
3	Digital IO		

All VisiLine cameras with a USB 3.0 interface have the following features:

Very high image quality	▪ Low noise and structure-free image information
Flexible image acquisition	▪ Industrially compliant process interface with parameter setting capability (trigger and flash)
Fast image transfer	▪ Reliable transmission at 5000 Mbit/sec according to USB 3.0 (v1.0) standard
	▪ Single cable solution for data and power
	▪ GenICam™ and USB3 Vision™ compliant
Perfect integration	▪ Flexible generic programming interface (Baumer GAPI) for all Baumer cameras
	▪ Powerful Software Development Kit (SDK) with sample codes and help files for easy integration
	▪ Baumer Camera Explorer Test Tool for all camera functions
	▪ Camera features according to the SFNC (v2.0)
	▪ GenICam™ compliant XML file to show the camera features
	▪ Supplied with installation program including automatic camera recognition for easy commissioning
Compact design	▪ Light weight
	▪ Flexible assembly
Reliable operation	▪ State-of-the-art camera electronics and precision mechanics
	▪ Low power consumption and minimal heat generation


5. Camera Models

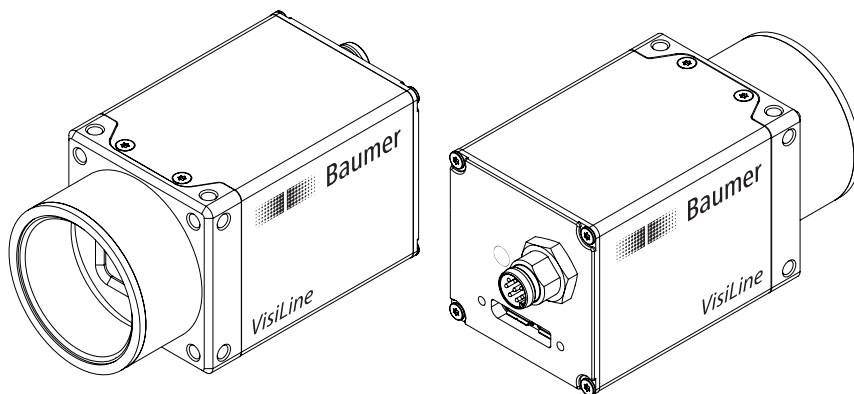

◀ **Figure 1**
Baumer VLU camera

Camera Type	Sensor Size	Resolution	Full Frames [max. fps]
CCD Sensor (monochrome / color)			
VLU-02M / VLU-02C	1/4"	656 x 490	160
VLU-12M / VLU-12C	1/3"	1288 x 960	42
CMOS Sensor (monochrome / color)			
VLU-03M / VLU-03C	1/3"	640 x 480	376

Dimensions

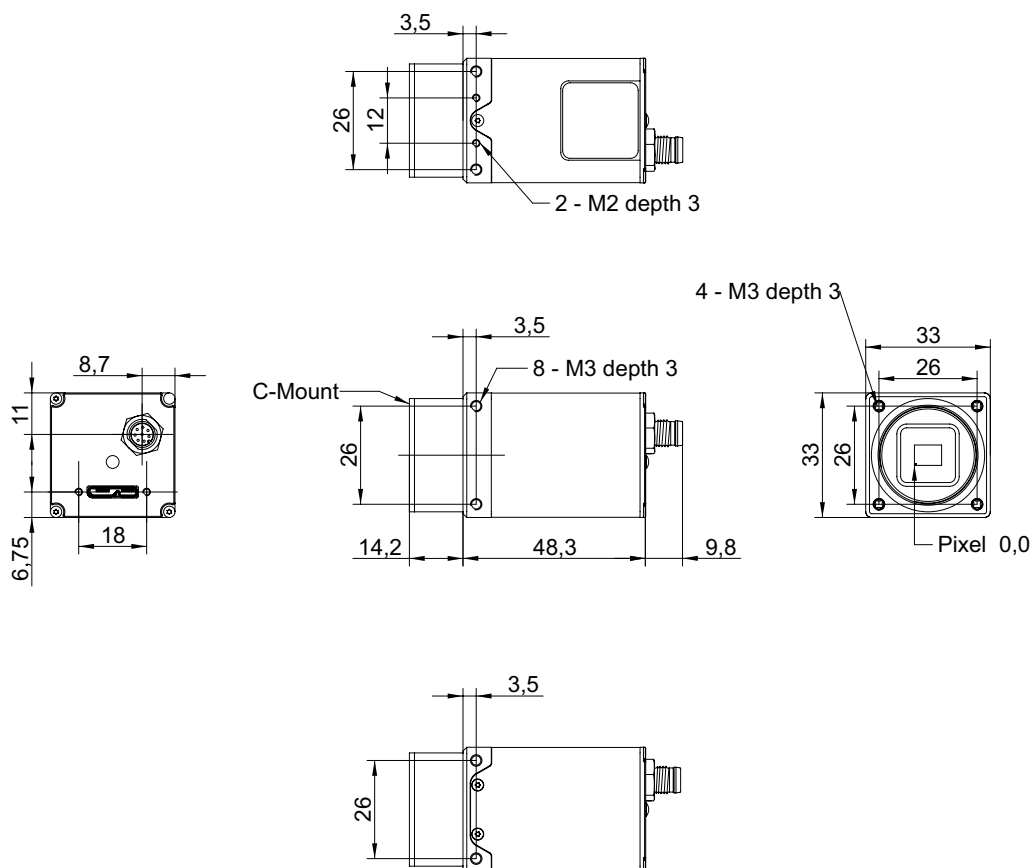

6. Installation



Caution



Observe precautions for handling electrostatically sensitive devices!

6.1 Lens mounting

Notice

Ensure the sensor and lens are not contaminated with dust and airborne particles when mounting the support or the lens to the device!

The following points are very important:

- Install the camera in an environment that is as dust free as possible!
- Keep the dust cover (bag) on the camera for as long as possible!
- Hold the printer with the sensor downwards if the sensor is uncovered.
- Avoid contact with any of the camera's optical surfaces!

6.2 Environmental Requirements

Temperature

Storage temperature	-10°C ... +70°C (+14°F ... +158°F)
Operating temperature*	see Heat Transmission

* If the ambient temperature exceeds the values listed in the table below, the camera must be cooled. (see Heat Transmission)

Humidity

Storage and Operating Humidity	10% ... 90% Non-condensing
--------------------------------	-------------------------------

6.2.1 Mechanical Tests

Environmen- tal Testing	Standard	Parameter	
Vibration, sinu- soidal	IEC 60068-2-6	Search for Reso- nance	10-2000 Hz
		Amplitude under- neath crossover frequencies	1.5 mm
		Acceleration	1 g
		Test duration	15 min
Vibration, broad band	IEC 60068- 2-64	Frequency range	20-1000 Hz
		Acceleration	10 g
		Displacement	5.7 mm
Shock	IEC 60068- 2-27	Test duration	300 min
		Puls time	11 ms / 6 ms
		Acceleration	50 g / 100 g
Bump	IEC60068-2- 29	Pulse Time	2 ms
		Acceleration	80 g

6.2.2 Heat Transmission

**Caution**

Heat can damage the camera. Heat must be dissipated adequately to ensure that the temperature does not exceed the values in the table below.

As there are numerous possibilities for installation, Baumer do not specify a specific method for proper heat dissipation, but suggest the following principles:

- operate the cameras only in mounted condition
- mounting in combination with forced convection may provide proper heat dissipation


**Caution**



Device heats up during operation.

Skin irritation possible.

Do not touch the camera operation.

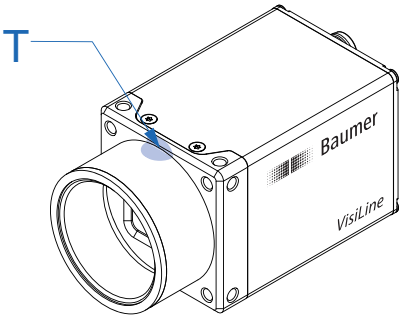

◀ **Figure 2**
Temperature measuring point


Measurement Point	Maximum Temperature
T	max. 50°C (122°F)


7. Pin Assignment

7.1 USB 3.0 Interface

USB 3.0 Micro B			
			
1	VBUS	6	MicB_SSTX-
2	D-	7	MicB_SSTX+
3	D+	8	GND_DRAIN
4	ID	9	MicB_SSRX-
5	GND	10	MicB_SSRX+


7.2 Digital IOs

Digital IOs (M8 / 8 pins / wire colors of the connecting cable)					
					
1	OUT 3	white	5	IO Power VCC	grey
2	not connected	brown	6	OUT 1	pink
3	IN 1	green	7	not connected	blue
4	IO GND	yellow	8	OUT 2	red

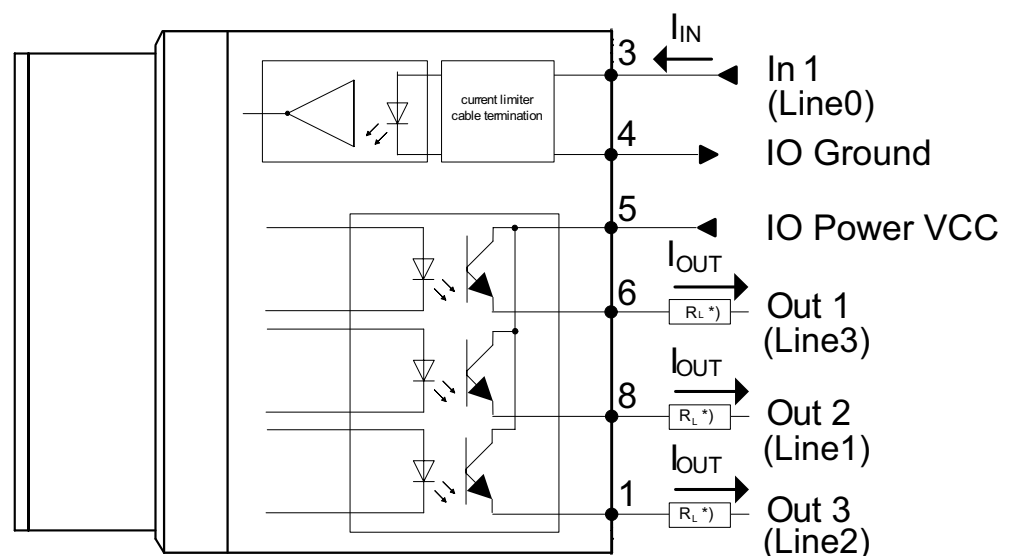

*) resistor must be used, $I_{OUT} = 16 \text{ mA}$
 by $U_{EXT} = 24 \text{ VDC}$ recommended,
 drawing shown above example
 for using high active signal

7.2.1 LED Signalling

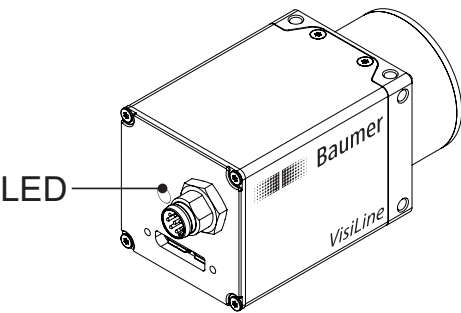

◀ **Figure 3**
LED position on Baumer
VLU camera.

	Signal	Meaning
LED	green	USB 3.0 connection
	yellow	USB 2.0 connection (settings possible, no frames)

Notice

Why can frames not be transferred over an USB 2.0 connection?

The camera needs to be supplied with more than 2.5W when transferring frames. With an USB 2.0 connection maximally 2.5W are available. Therefore switching off of the frame transfer is necessary. However, settings are still possible.

8. Product Specifications

8.1 Spectral Sensitivity for Baumer VLU Cameras

The following graphs show the spectral sensitivity characteristics of monochrome and color matrix sensors for VLU cameras. The curves for the sensors do not take the characteristics of lenses and light sources without filters into account.

Values relate to the respective technical data sheets for the sensors.

Figure 4 ►

Spectral sensitivities for Baumer cameras with 0.3 MP CCD sensors.

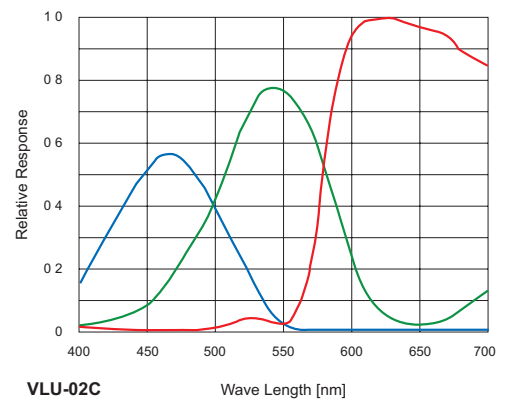
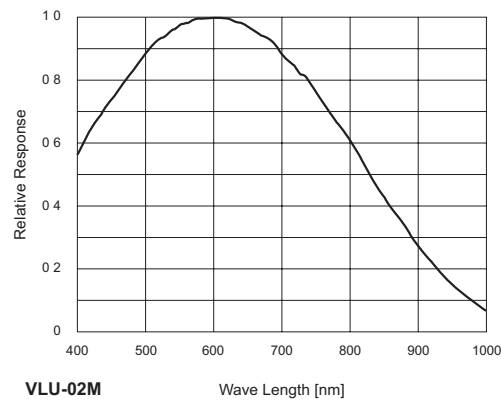


Figure 5 ►

Spectral sensitivities for Baumer cameras with 0.3 MP CMOS sensors.

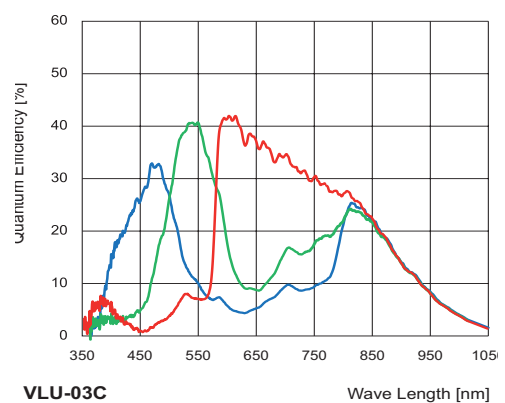
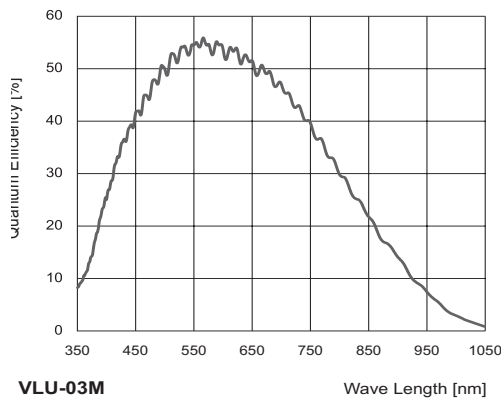


Figure 6 ►

Spectral sensitivities for Baumer cameras with 1.2 MP CCD sensors.



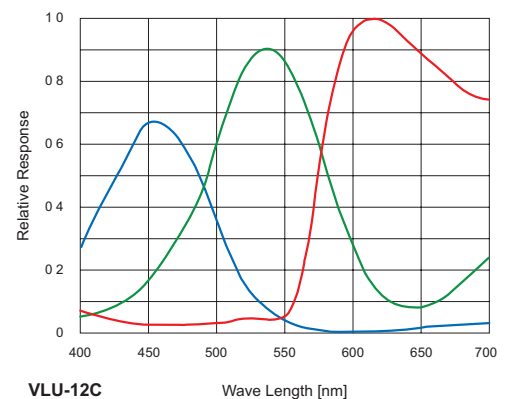



Figure 7 ►

Curve of the UV/IR blocking filter for color cameras

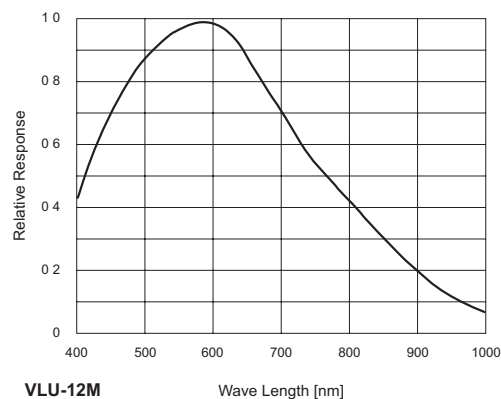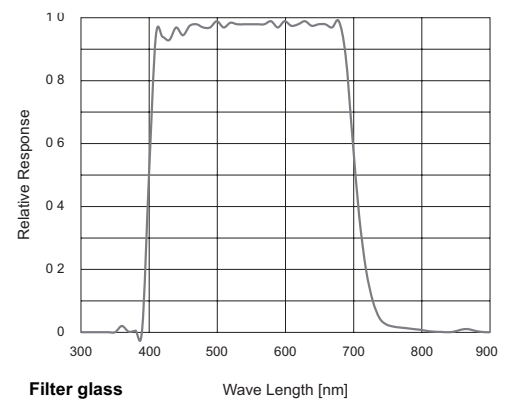

8.2 Field of View Position

The figures and table below show the typical accuracy by assumption of the root mean square value:

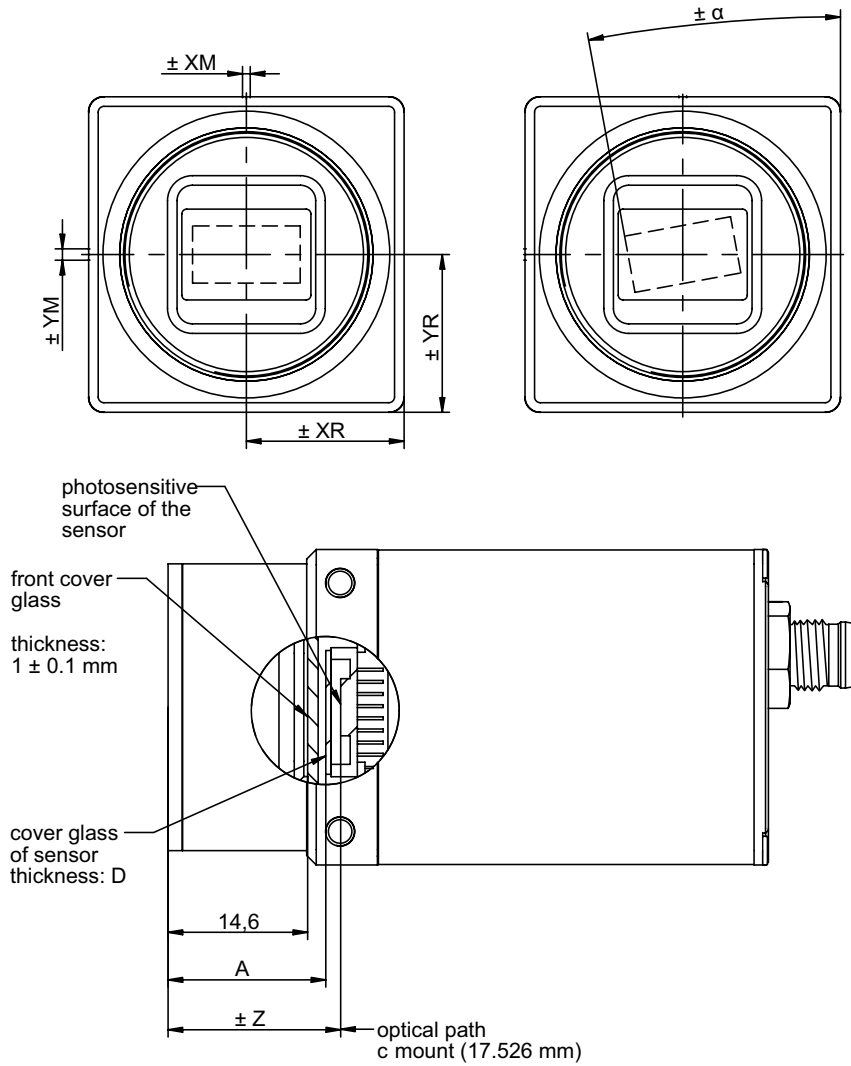

Camera Type	$\pm x_M$ [mm]	$\pm y_M$ [mm]	$\pm x_R$ [mm]	$\pm y_R$ [mm]	$\pm z_{typ}$ [mm]	$\pm \alpha_{typ}$ [°]	A [mm]	D** [mm]
VLU-02*	0.09	0.09	0.09	0.09	0.025	0.7	16.1	0.75
VLU-03*	0.07	0.07	0.07	0.07	0.025	1.23	17.54	0.45
VLU-12*	0.06	0.06	0.06	0.06	0.025	0.7	16.6	0.5

typical accuracy by assumption of the root mean square value

* C or M

** Dimension D in this table is from manufacturer datasheet (edition 06/2012)

8.3 Acquisition Modes and Timings


Image acquisition consists of two separate, successively processed components.

Exposing the pixels on the photosensitive surface of the sensor is only the first part of the image acquisition process. Once the first step is completed, the pixels are read out.

The exposure time (t_{exposure}) can be adjusted by the user, however, the time needed for the readout (t_{readout}) is determined by the particular sensor and image format.

Baumer cameras can be operated in three different modes, Free Running Mode, Fixed-Frame-Rate Mode and Trigger Mode.

The cameras can be operated non-overlapped¹⁾ or overlapped, depending on the mode used and the combination of exposure and readout time:

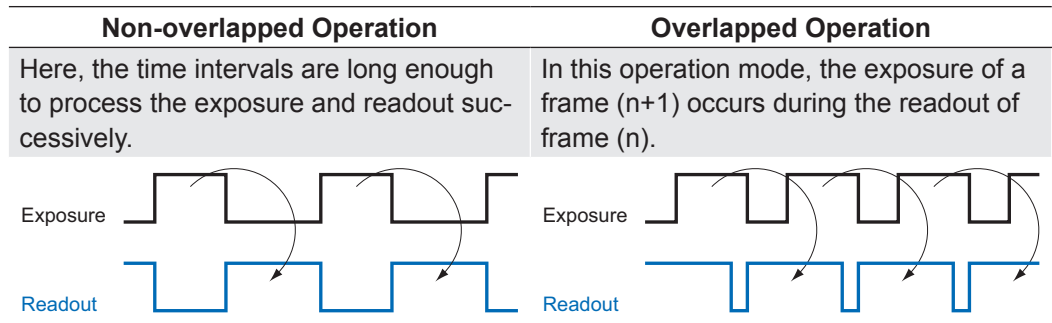


8.3.1 Free Running Mode

In the "Free Running" mode, the camera records images permanently and transfers them to the PC. To achieve the best results (with regard to the adjusted exposure time t_{exposure} and image format), the camera is operated overlapped.

In case of exposure times equal to / less than the readout time ($t_{\text{exposure}} \leq t_{\text{readout}}$), the maximum frame rate is provided for the image format used. For longer exposure times, the frame rate of the camera is reduced.

Timings:
A - exposure time frame (n) effective
B - image parameters frame (n) effective
C - exposure time frame (n+1) effective
D - image parameters frame (n+1) effective

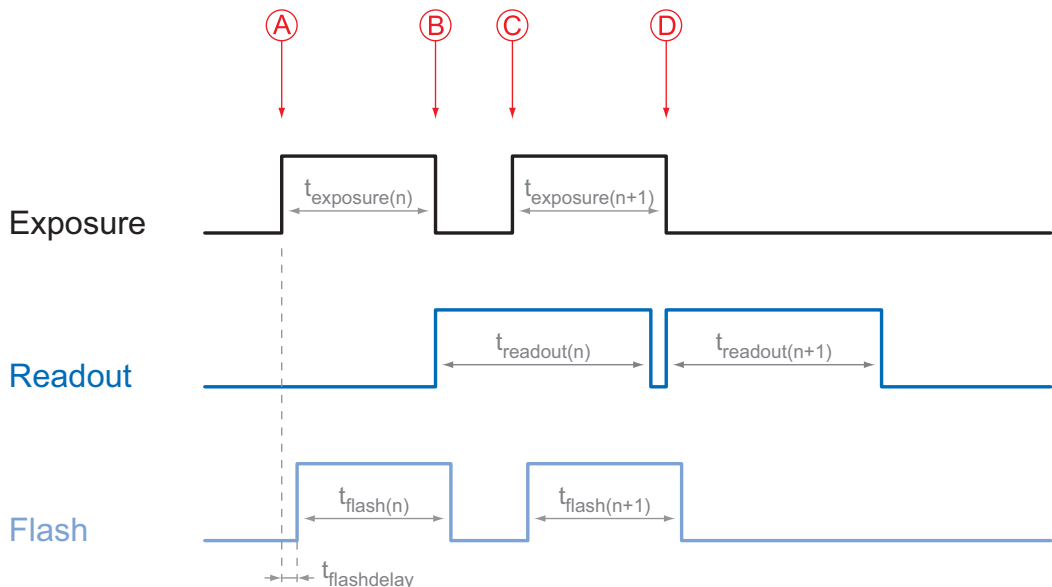

$$t_{\text{flash}} = t_{\text{exposure}}$$

Image parameters:
Offset
Gain
Mode
Partial Scan

¹⁾Non-overlapped means sequential.

8.3.2 Fixed-Frame-Rate Mode

With this feature, Baumer introduces a clever technique to the VLU camera series that enables the user to predefine a desired frame rate in continuous mode.

For this mode, the cameras are equipped with an internal clock generator that creates trigger pulses.

Notice

Above a certain frame rate, skipping internal triggers becomes unavoidable. In general, this depends on the combination of the adjusted frame rate, exposure and readout times.

8.3.3 Trigger Mode

Image acquisition begins after a specified external event (trigger) occurs. Depending on the interval of triggers used, the camera can operate either non-overlapped or overlapped in this mode.

With regard to timings in the trigger mode, the following basic formulas need to be taken into consideration:

Case		Formula
$t_{\text{exposure}} < t_{\text{readout}}$	(1)	$t_{\text{earliestpossibletrigger}(n+1)} = t_{\text{readout}(n)} - t_{\text{exposure}(n+1)}$
	(2)	$t_{\text{notready}(n+1)} = t_{\text{exposure}(n)} + t_{\text{readout}(n)} - t_{\text{exposure}(n+1)}$
$t_{\text{exposure}} > t_{\text{readout}}$	(3)	$t_{\text{earliestpossibletrigger}(n+1)} = t_{\text{exposure}(n)}$
	(4)	$t_{\text{notready}(n+1)} = t_{\text{exposure}(n)}$

8.3.3.1 Overlapped Operation: $t_{\text{exposure}(n+2)} = t_{\text{exposure}(n+1)}$


During overlapped operation, be mindful of the time interval during which the camera is unable to process trigger signals (t_{notready}) that occur. This interval occurs between two exposures. When this processing time t_{notready} has elapsed, the camera is able to react to external events again.

Once t_{notready} has elapsed, the timing of (E) depends on the readout time of the current image ($t_{\text{readout}(n)}$) and exposure time of the next image ($t_{\text{exposure}(n+1)}$). It can be determined by the formulas mentioned above (no. 1 or 3, dependant on the case).

In case of identical exposure times, t_{notready} remains the same from acquisition to acquisition.

Timings:
A - exposure time frame (n) effective
B - image parameters frame (n) effective
C - exposure time frame (n+1) effective
D - image parameters frame (n+1) effective
E - earliest possible trigger


Image parameters:
Offset
Gain
Mode
Partial Scan

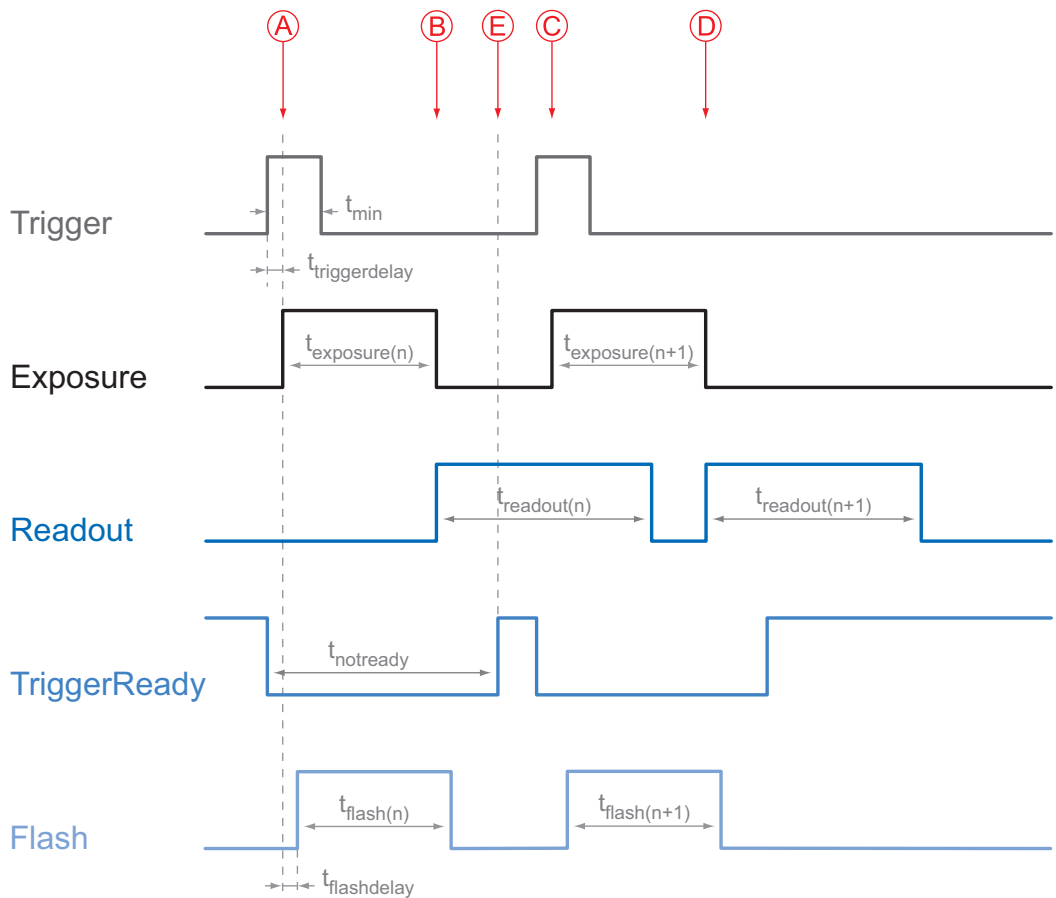

8.3.3.2 Overlapped Operation: $t_{\text{exposure}(n+2)} > t_{\text{exposure}(n+1)}$

If the exposure time (t_{exposure}) is increased from the current acquisition to the next acquisition, the time the camera is unable to process occurring trigger signals (t_{notready}) is scaled down accordingly.

This can be simulated with the formulas mentioned above (no. 2 or 4, dependant on the case).

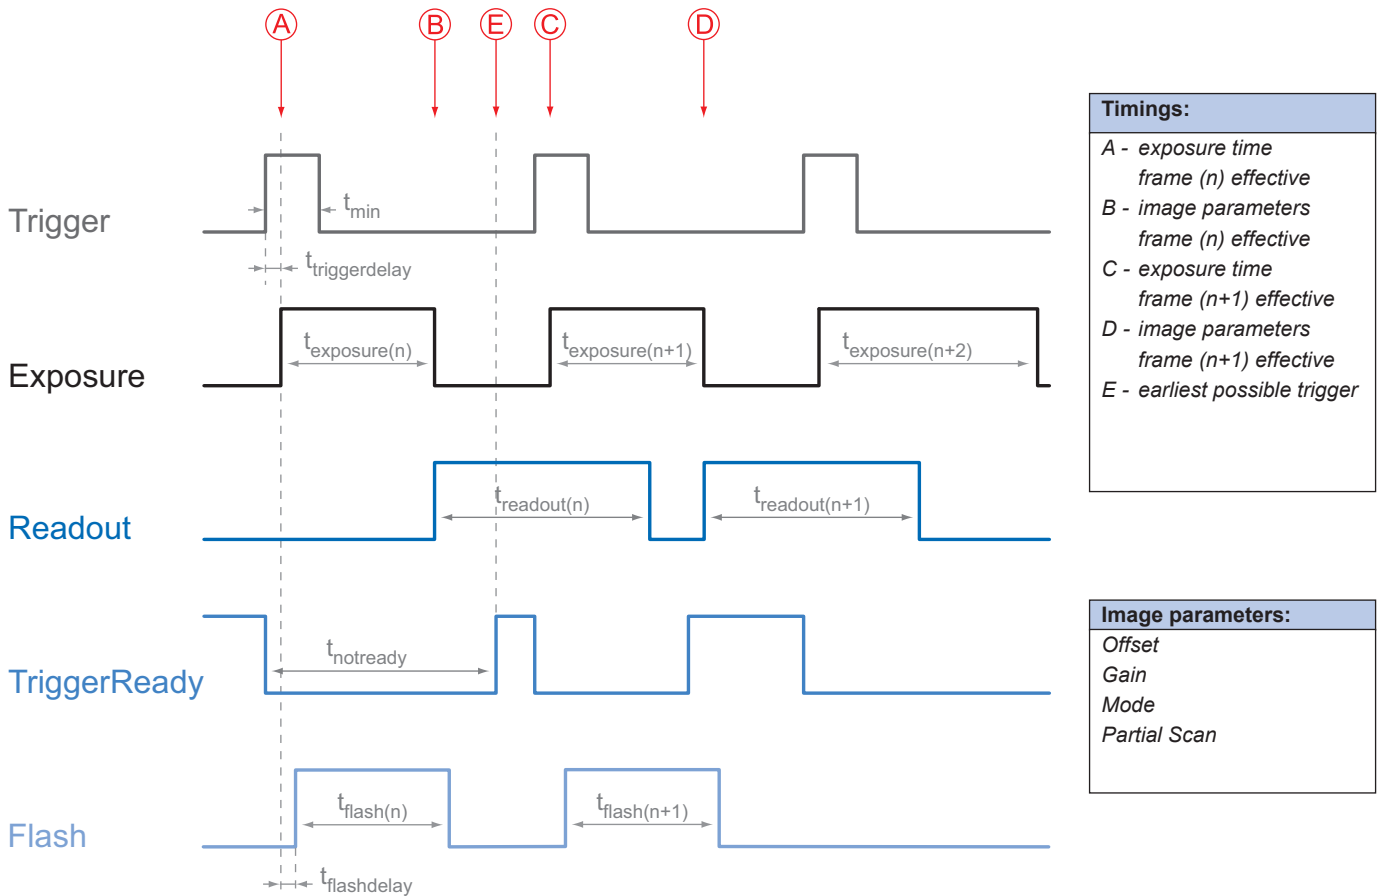

8.3.3.3 Overlapped Operation: $t_{\text{exposure}(n+2)} < t_{\text{exposure}(n+1)}$

If the exposure time (t_{exposure}) is decreased from the current acquisition to the next acquisition, the time the camera is unable to process occurring trigger signals (t_{notready}) is scaled up accordingly.


If the t_{exposure} is decreased to the extent that t_{notready} exceeds the pause between two incoming trigger signals, the camera is unable to process this trigger and image acquisition will not start (the trigger will be skipped).

Timings:

- A - exposure time frame (n) effective
- B - image parameters frame (n) effective
- C - exposure time frame (n+1) effective
- D - image parameters frame (n+1) effective
- E - earliest possible trigger
- F - frame not started / trigger skipped

Image parameters:

- Offset
- Gain
- Mode
- Partial Scan

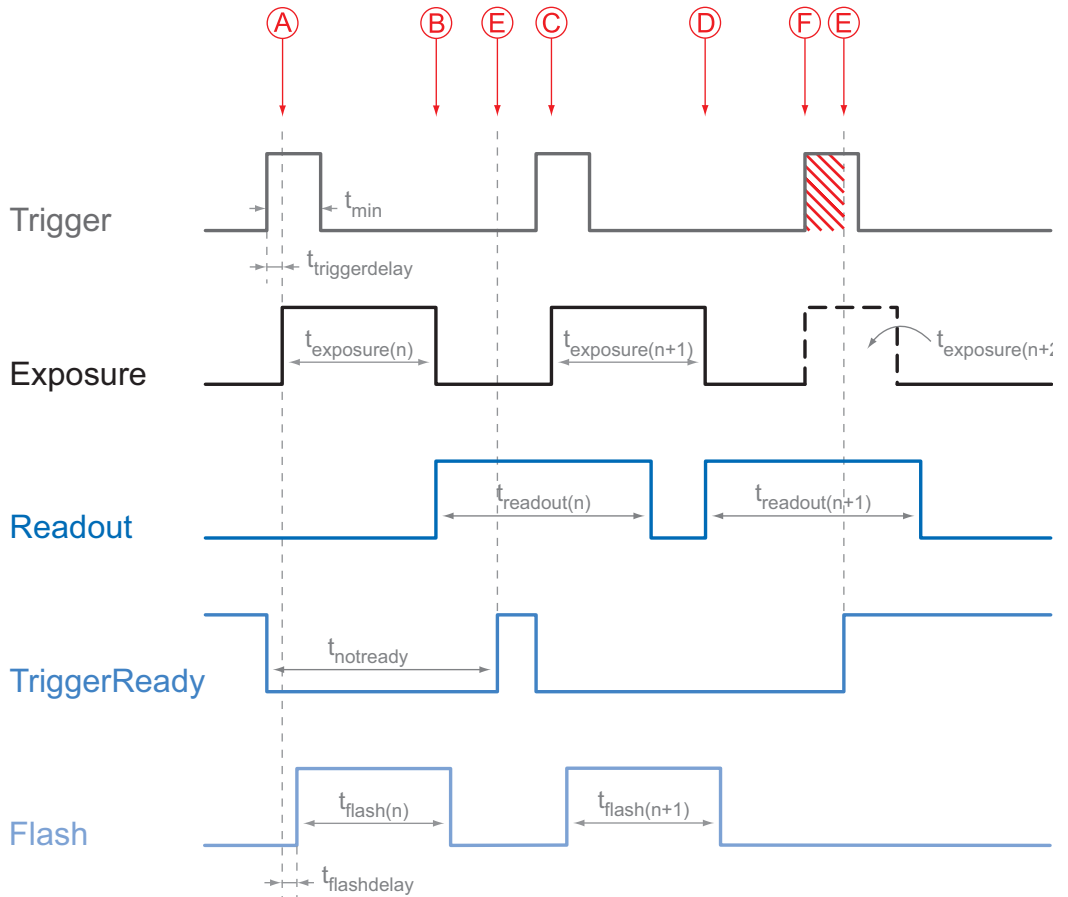


Notice

Above a certain frequency of trigger signal, skipping triggers becomes unavoidable. In general, this frequency depends on the combination of exposure and readout times.

8.3.3.4 Non-overlapped Operation

If the frequency of the trigger signal is set long enough that the image acquisitions ($t_{\text{exposure}} + t_{\text{readout}}$) run successively, the camera operates non-overlapped.

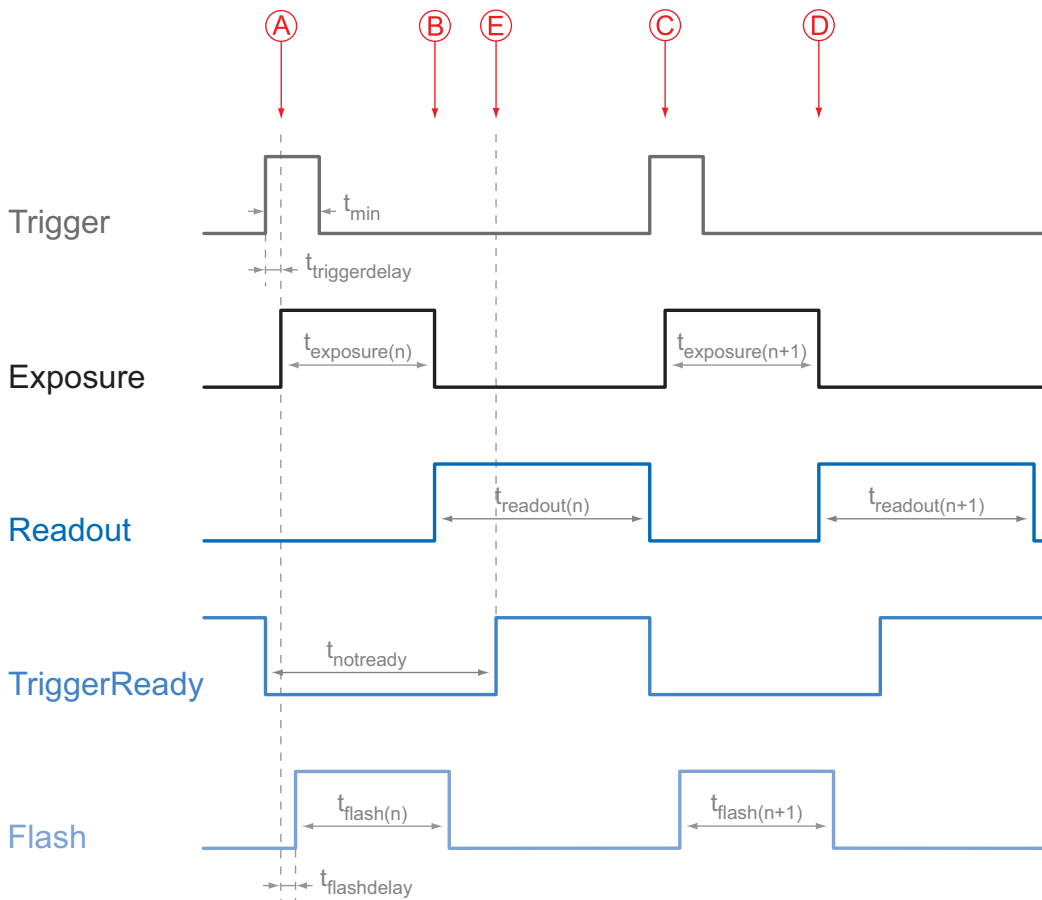

Timings:	
A -	exposure time frame (n) effective
B -	image parameters frame (n) effective
C -	exposure time frame $(n+1)$ effective
D -	image parameters frame $(n+1)$ effective
E -	earliest possible trigger


Image parameters:	
Offset	
Gain	
Mode	
Partial Scan	

8.3.4 Advanced Timings for USB 3.0 Vision™ Message Channel

The following charts show some timings for event signalling by the asynchronous message channel. Explanations are provided for vendor-specific events such as "TriggerReady", "TriggerSkipped", "TriggerOverlapped" and "ReadoutActive".


8.3.4.1 TriggerReady

This event signals whether the camera is able to process incoming trigger signals or not.

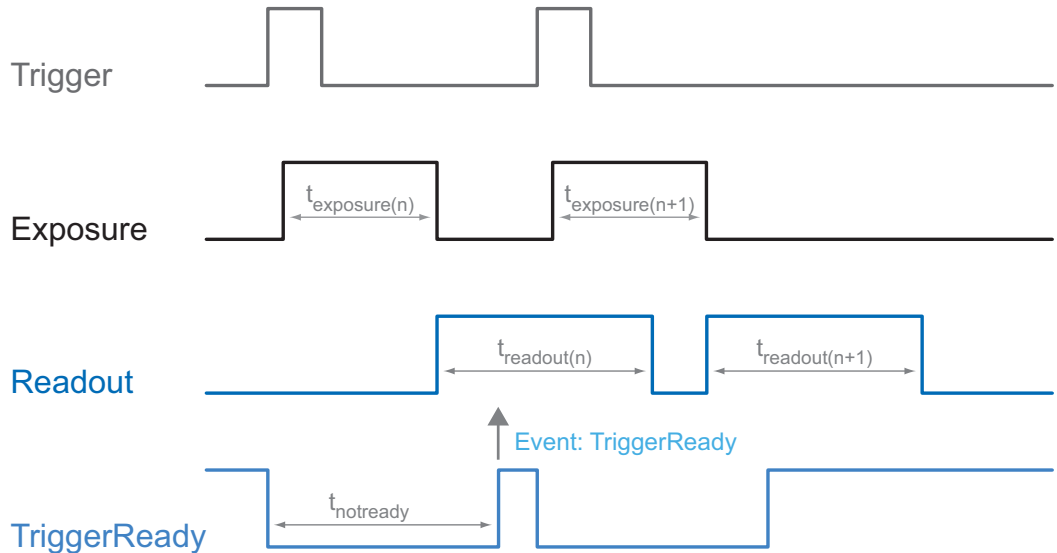


8.3.4.2 TriggerSkipped

If the camera is unable to process incoming trigger signals, meaning that the camera should be triggered within the interval t_{notready} , these triggers are skipped. On Baumer VLU cameras, the user will be informed about this fact by way of the "TriggerSkipped" event.

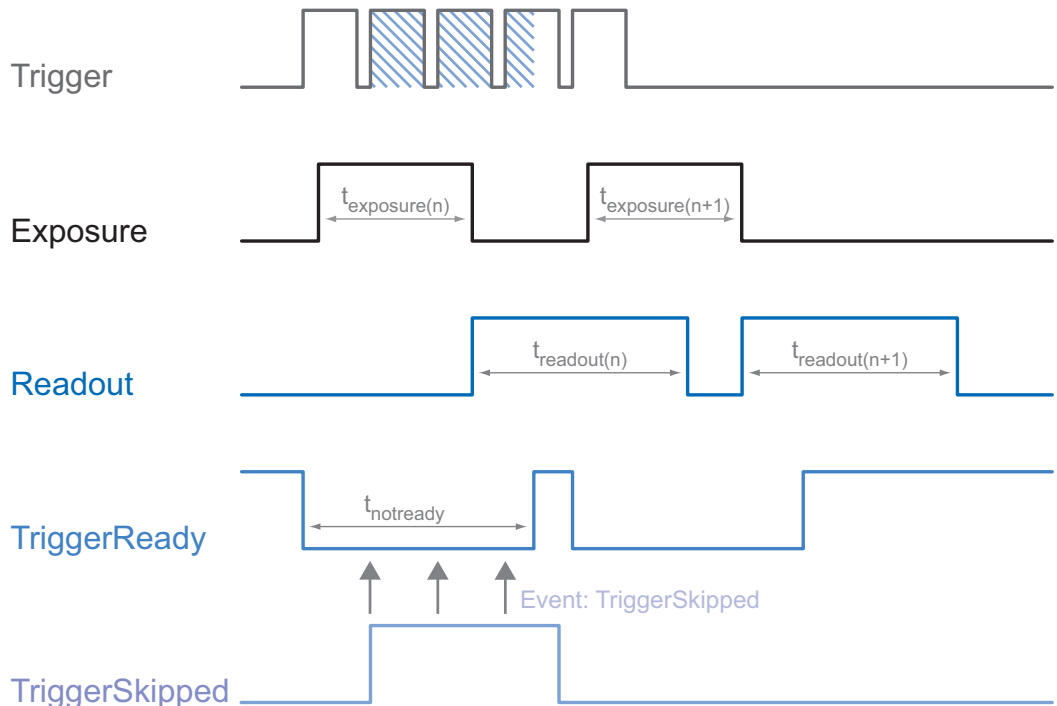

8.3.4.3 TriggerOverlapped


This signal is active for as long as the sensor is exposed and read out at the same time, meaning that the camera is operated overlapped.

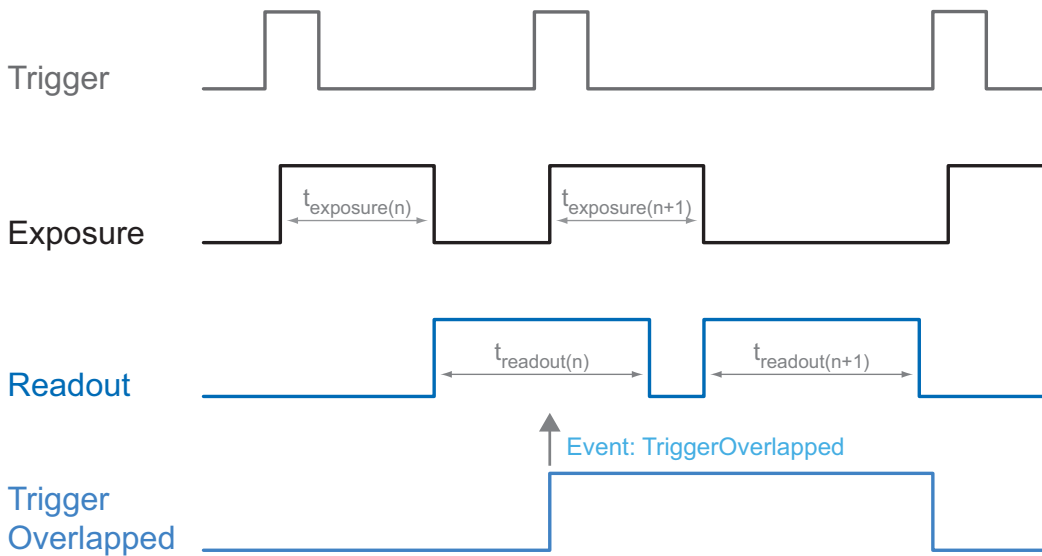

Once a valid trigger signal occurs outside of a readout, the "TriggerOverlapped" signal changes to state low.

8.3.4.4 ReadoutActive

While the sensor is being read out, the camera signals this with "ReadoutActive".

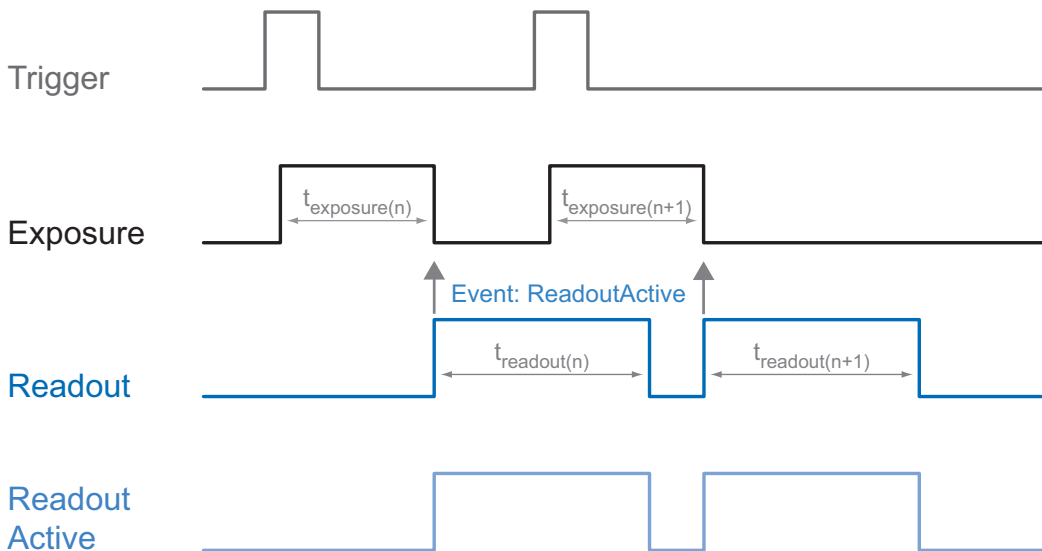

8.4 Software

8.4.1 Baumer GAPI

Baumer GAPI stands for **Baumer “Generic Application Programming Interface”**. With this API, Baumer provides an interface for optimal integration and control of Baumer cameras.

It provides interfaces to several programming languages, such as C, C++ and the .NET™ Framework on Windows®, meaning that other languages, such as e.g. C# or VB.NET can also be used.

Baumer GAPI SDK higher than v2.2 supports USB3 Vision™.

8.4.2 3rd Party Software

Strict compliance with the GenICam™ and USB3 Vision™ standards allows Baumer to offer the use of 3rd Party software.

You can find a current list of 3rd Party software that has been tested successfully in combination with Baumer cameras at <http://www.baumer.com/de-en/products/identification-image-processing/software-and-starter-kits/third-party-software/>

9. Camera Functionalities

9.1 Image Acquisition

9.1.1 Image Format

A digital camera usually delivers image data in at least one format - the native resolution of the sensor. Baumer cameras are able to provide several image formats (depending on the type of camera).

Compared with standard cameras, the image format on Baumer cameras includes not only the resolution, but also a set of predefined parameters.

These parameters are:

- Resolution (horizontal and vertical dimensions in pixels)
- Binning Mode

Camera Type	Full frame	Binning 2x2	Binning 1x2	Binning 2x1
Monochrome				
VLU-02M	■	■	■	■
VLU-03M	■	■	■	■
VLU-12M	■	■	■	■
Color				
VLU-02C	■	■	■	■
VLU-03C	■	■	■	■
VLU-12C	■	■	■	■

9.1.2 Pixel Format

On Baumer digital cameras, the pixel format depends on the selected image format.

9.1.2.1 Definitions

RAW: Raw data format. Here, the data is stored without being processed.

Bayer: Raw data format of color sensors.

Color filters are placed on these sensors in a checkerboard pattern, generally in a 50% green, 25% red and 25% blue array.

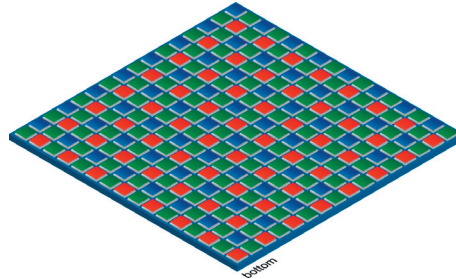


Figure 8 ►

Sensor with Bayer Pattern

Mono: Monochrome. The color range of mono images consists of shades of a single color. In general, shades of gray or black-and-white are synonymous with monochrome.

RGB: Color model in which all detectable colors are defined by three coordinates, Red, Green and Blue.

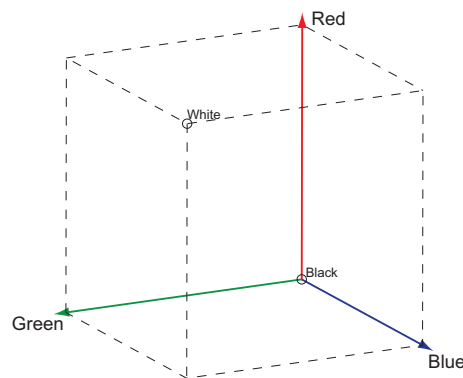


Figure 9 ►

RGB color space displayed as color tube.

The three coordinates are displayed within the buffer in the order R, G, B.

BGR: Here, the color alignment mirrors RGB.

YUV: Color model, which is used in the PAL TV standard and in image compression. In YUV, a high bandwidth luminance signal (Y: luma information) is transmitted together with two color difference signals with low bandwidth (U and V: chroma information). U represents the difference between blue and luminance ($U = B - Y$), V is the difference between red and luminance ($V = R - Y$). The third color, green, does not need to be transmitted as its value can be calculated from the other three values.

YUV 4:4:4 Here, each of the three components has the same sample rate. There is therefore no sub-sampling in this case.


YUV 4:2:2 The chroma components are sampled at half the sample rate. This reduces the necessary bandwidth to two-thirds (in relation to 4:4:4) and causes no, or low visual differences.

YUV 4:1:1 Here, the chroma components are sampled at a quarter of the sample rate. This decreases the necessary bandwidth by half (in relation to 4:4:4).

Pixel depth: In general, pixel depth defines the number of possible different values for each color channel. Mostly this will be 8 bit, which means 2^8 different "colors".

For RGB or BGR these 8 bits per channel equate to 24 bits overall.

Two bytes are needed to transmit more than 8 bits per pixel - even if the second byte is not completely filled with data. In order to save bandwidth, packed formats have been added to Baumer VLU cameras. In these formats, the unused bits of one pixel are filled with data from the next pixel.

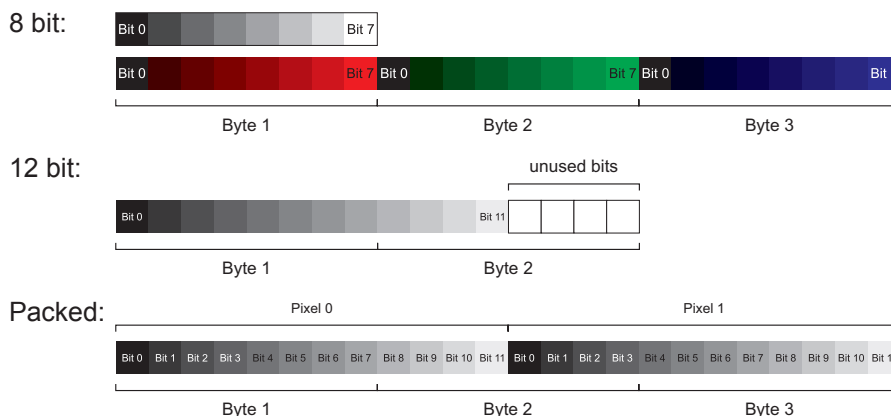

◀ **Figure 10**
Bit string of Mono 8 bit and RGB 8 bit.

◀ **Figure 11**
Spreading of Mono 12 bit over two bytes.

◀ **Figure 12**
Spreading of two pixels in Mono 12 bit over three bytes (packed mode).

9.1.2.2 Pixel Formats on Baumer VLU Cameras

Camera Type	Mono 8	Mono 12	Mono 12 Packed	Bayer RG 8	Bayer RG 12	RGB 8	BGR 8	YUV8_UYV	YUV422_8_UYVY	YUV411_8_UYVYVY
Monochrome										
VLU-02M	■	■	■	□	□	□	□	□	□	□
VLU-03M	■	■	■	□	□	□	□	□	□	□
VLU-12M	■	■	■	□	□	□	□	□	□	□
Color										
VLU-02C	■	□	□	■	■	■	■	■	■	■
VLU-03C	■	□	□	■	■	■	■	■	■	■
VLU-12C	■	□	□	■	■	■	■	■	■	■

9.1.3 Exposure Time

On exposure of the sensor, the inclination of photons produces a charge separation on the semiconductors of the pixels. This results in a voltage difference, which is used for signal extraction.

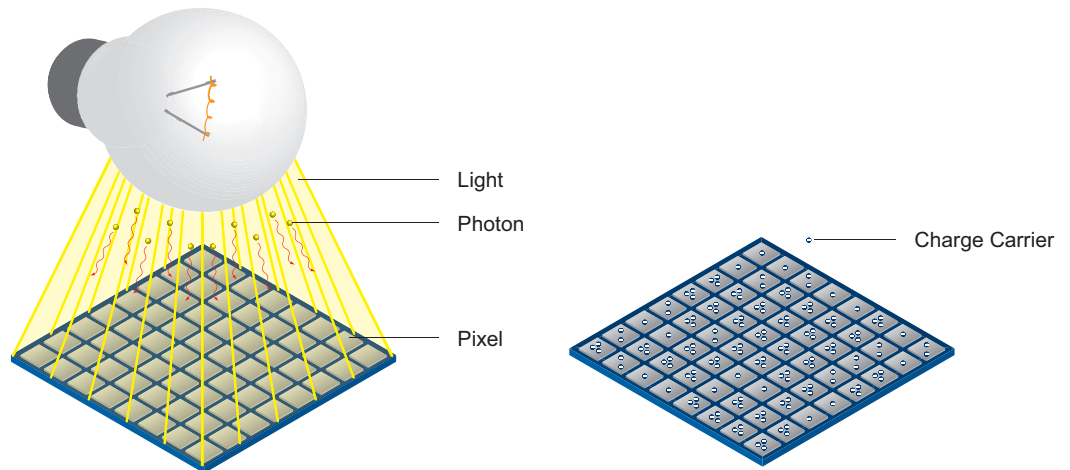


Figure 13 ►

Incidence of light causes charge separation on the semiconductors of the sensor.

The signal strength is influenced by the incoming amount of photons. It can be increased by increasing the exposure time (t_{exposure}).

On Baumer VLU cameras, the exposure time can be set within the following ranges (increments of 1 μsec):

Camera Type	t_{exposure} min	t_{exposure} max
Monochrome		
VLU-02M	4 μsec	60 sec
VLU-03M	4 μsec	60 sec
VLU-12M	4 μsec	60 sec
Color		
VLU-02C	4 μsec	60 sec
VLU-03C	4 μsec	60 sec
VLU-12C	4 μsec	60 sec

9.1.4 PRNU / DSNU Correction (FPN - Fixed Pattern Noise)


Camera Type		PRNU / DSNU correction
CCD (monochrome / color)		
VLU-02M / VLU-02C		☐
VLU-12M / VLU12C		☐
CMOS (monochrome / color)		
VLU-03M / VLU-03C		☒

CMOS sensors exhibit non-uniformities that are often called fixed pattern noise (FPN). However, it is not actually noise, but rather a fixed variation from pixel to pixel that can be corrected. The advantage of using this correction is a more homogeneous picture which may simplify image analysis. Variations of the dark signal from pixel to pixel are called dark signal non-uniformity (DSNU) whereas photo response non-uniformity (PRNU) describes variations in sensitivity. DSNU is corrected via an offset while PRNU is corrected using a factor.

The correction is based on columns. It is important that the correction values are calculated for the sensor readout configuration used. During camera production, this is derived from the factory defaults. If other settings are used (e.g. different number of readout channels), using this correction with the default data set may degrade the image quality. In this case, the user may derive a specific data set for the setup used.



without PRNU / DSNU Correction
(Example image, PRNU / DSNU Correction can not be disabled)

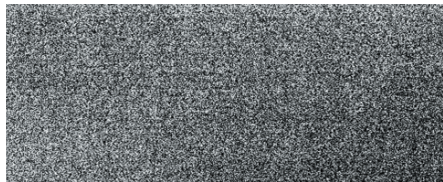

with PRNU / DSNU Correction


9.1.5 HDR (High Dynamic Range)

Camera Type	HDR
CCD (monochrome / color)	
VLU-02M / VLU-02C	☐
VLU-12M / VLU12C	☐
CMOS (monochrome / color)	
VLUC-03M / VLU-03C	☒


Alongside the standard linear response, the sensor also supports a special high dynamic range mode (HDR) called piecewise linear response. With this mode, illuminated pixels that reach a certain programmable voltage level are clipped. Darker pixels that do not reach this threshold remain unchanged. The clipping can be adjusted twice within a single exposure by configuring the respective time slices and clipping voltage levels. See the figure below for details.

In this mode, the values for $t_{\text{Exp}0}$, $t_{\text{Exp}1}$, Pot_0 and Pot_1 can be edited.

The value for $t_{\text{Exp}2}$ is calculated automatically within the camera. ($t_{\text{Exp}2} = t_{\text{exposure}} - t_{\text{Exp}0} - t_{\text{Exp}1}$)

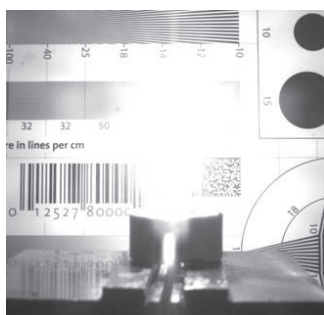

HDR Off

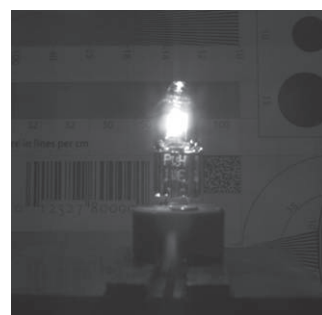

HDR On

9.1.6 Look-Up-Table

The Look-Up-Table (LUT) is used on Baumer VLU monochrome and color cameras. It contains 2^{12} (4096) values for the available levels. These values can be adjusted by the user.

9.1.7 Gamma Correction

With this feature, Baumer VLU cameras provide the option to compensate nonlinearity in the perception of light by the human eye.

For this correction, the corrected pixel intensity (Y') is calculated using the original intensity of the sensor's pixel (Y_{original}) and correction factor γ using the following formula (in an oversimplified version):


$$Y' = Y_{\text{original}}^{\gamma}$$

On Baumer VLU cameras the correction factor γ is adjustable from 0.001 to 2.

The values of the calculated intensities are entered into the Look-Up-Table (see 9.1.5). Previously existing values within the LUT will be overwritten.

Notice

If the LUT feature is disabled on the software side, the gamma correction feature is also disabled.

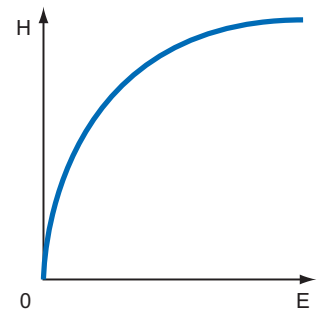

▲ **Figure 14**

Non-linear perception of the human eye.

H - Perception of brightness

E - Energy of light

9.1.8 Region of Interest (ROI)

With the "Region of Interest" (ROI) function, you can predefine a so-called Region of Interest (ROI) or Partial Scan. This ROI is an area of pixels of the sensor. When an image is acquired, only the information about these pixels is transferred to the PC. Not all lines of the sensor are read out, which therefore decreases the readout time (t_{readout}). This increases the frame rate.

This function is used when only a particular region of the field of view is of interest. It is coupled with a reduction in resolution.

The ROI is specified by four values:

- Offset X - x-coordinate of the first relevant pixel
- Offset Y - y-coordinate of the first relevant pixel
- Size X - horizontal size of the ROI
- Size Y - vertical size of the ROI

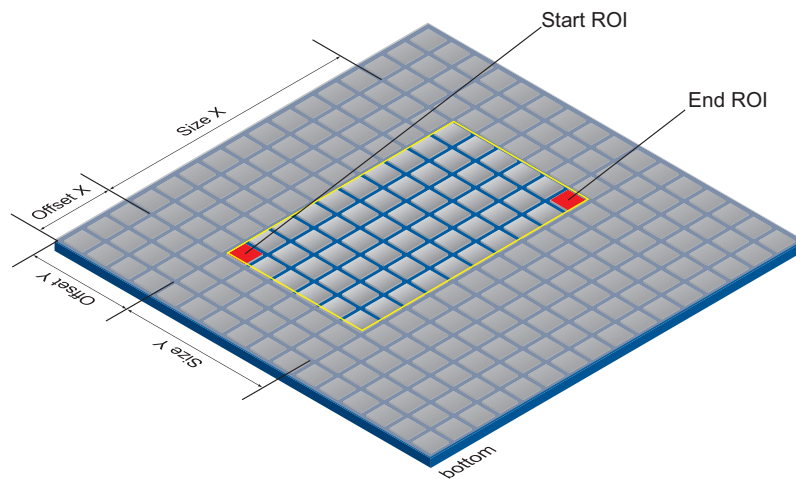


Figure 15 ►

ROI: Parameters

ROI Readout

In the illustration below, readout time would decrease to 40% of a full frame readout.

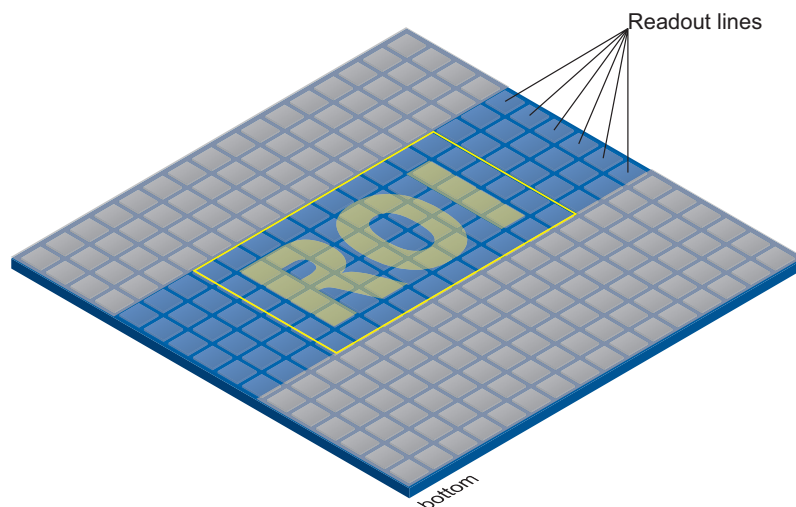


Figure 16 ►

Decrease in readout time by using partial scan.





9.1.9 Binning

On digital cameras, you can find several operations for progressing sensitivity. One of these is "Binning". Here, the charge carriers of neighboring pixels are aggregated. Thus the progression is greatly increased by the amount of binned pixels. By using this operation, the progression in sensitivity is coupled with a reduction in resolution.

Baumer cameras support three types of binning - vertical, horizontal and bidirectional.

In unidirectional binning, vertically or horizontally neighboring pixels are aggregated and reported to the software as a single "superpixel".

In bidirectional binning, a square of neighboring pixels is aggregated.

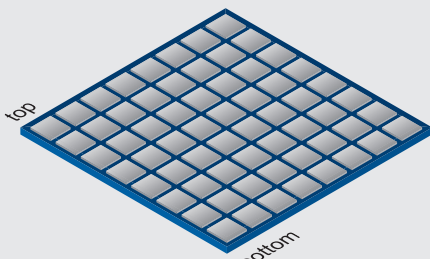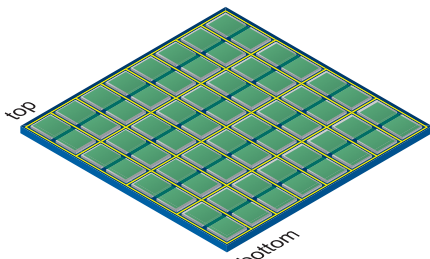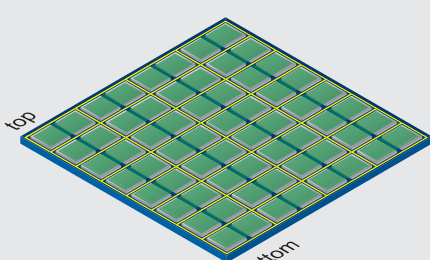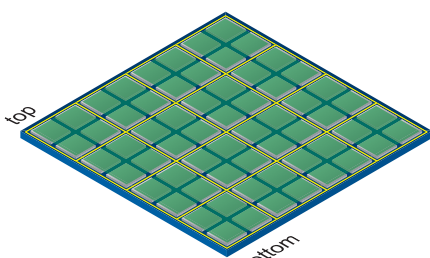Binning	Illustration	Example
without		
1x2		
2x1		
2x2		

◀ **Figure 17**

Full frame image, no binning of pixels.

◀ **Figure 18**

Vertical binning causes a doubly bright, vertically compressed image.

◀ **Figure 19**

Horizontal binning causes a doubly bright, horizontally compressed image.

◀ **Figure 20**

Bidirectional binning causes both a horizontally and vertically compressed image with quadruple brightness.


9.1.10 Brightness Correction (Binning Correction)

Aggregation of charge carriers may cause an overload. Binning correction was introduced to prevent this. Here, three binning modes need to be considered separately:

Binning	Realization
1x2	1x2 binning is performed within the sensor, binning correction also takes place here. A possible overload is prevented by halving the exposure time.
2x1	2x1 binning takes place within the FPGA of the camera. The binning correction is realized by aggregating the charge quantities, and then halving this sum.
2x2	2x2 binning is a combination of the above versions.

Figure 21 ►

Aggregation of charge carriers from four pixels in bidirectional binning.

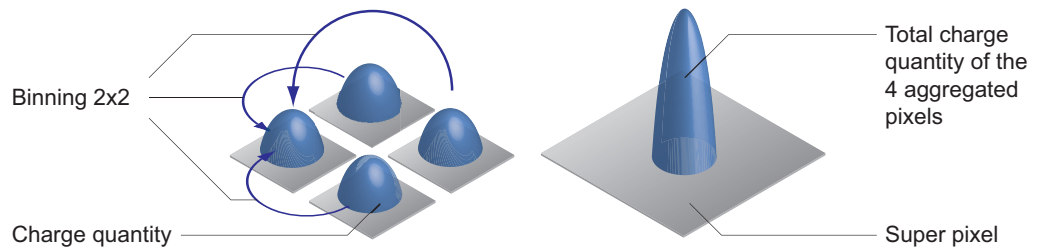


9.1.11 Flip Image

The Flip Image function lets you flip the captured images horizontally and/or vertically before they are transmitted from the camera.


Notice

Any defined ROI will also be flipped.


Camera Type	Horizontal	Vertical
VLU-02M / VLU-02C	☒	☐
VLU-12M / VLU-12C	☒	☐
VLU-03M / VLU-03C	☒	☒

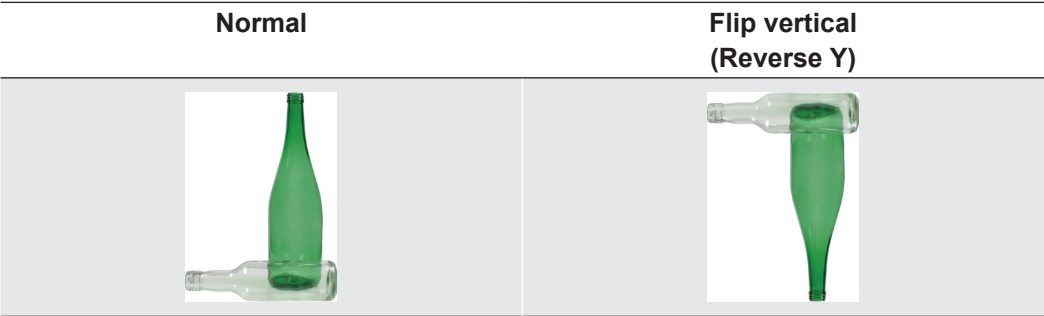

◀ Figure 22
Flip image vertically

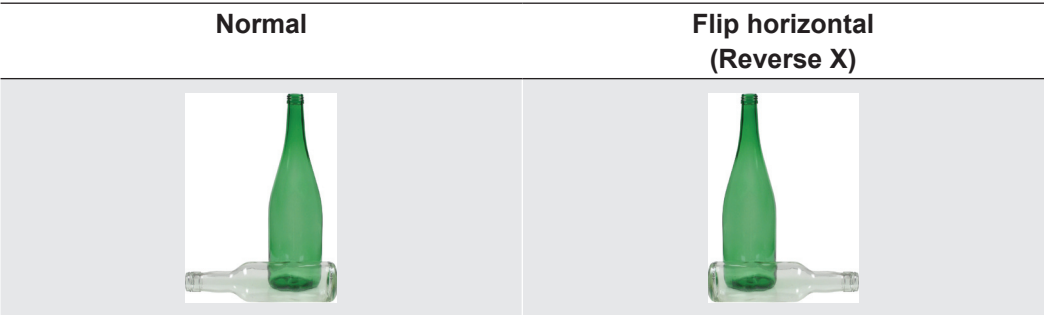

◀ Figure 23
Flip image horizontally

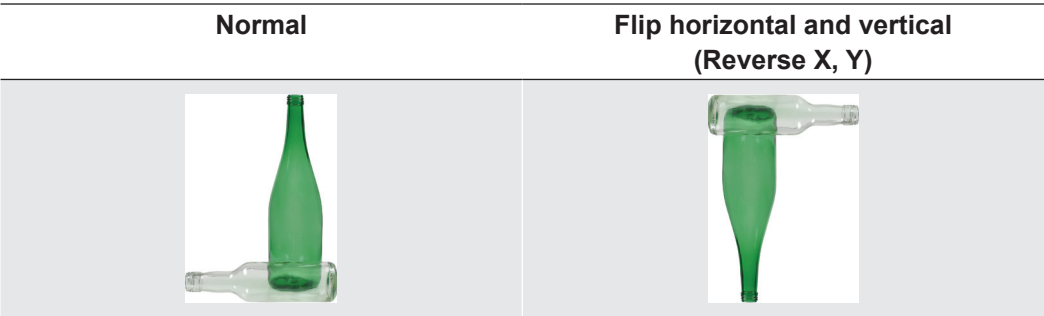

◀ Figure 24
Flip image horizontally
and vertically

9.2 Color Processing

Baumer color cameras are balanced to a color temperature of 5000 K.

Oversimplified, color processing is realized by 4 modules.

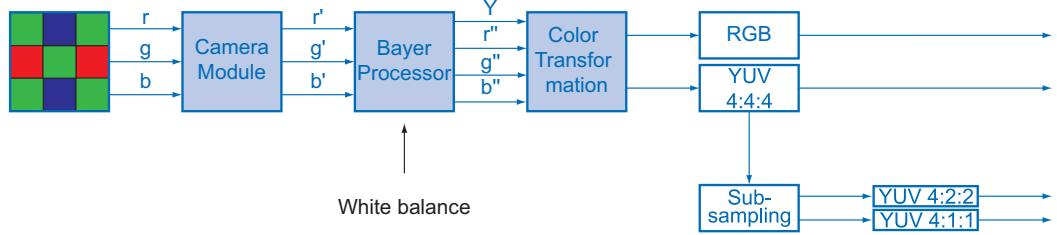


Figure 25 ►

Color processing modules of Baumer color cameras.

The sensor's r (red), g (green) and b (blue) color signals are amplified in total and digitized within the camera module.

Within the Bayer processor, the raw signals r' , g' and b' are amplified using independent factors for each color channel. Then, the missing color values are interpolated, which results in new color values (r'' , g'' , b''). The luminance signal Y is also generated.

The next step is color transformation. Here, the previously generated color signals r'' , g'' and b'' are converted to the chroma signals U and V , which conform to the standard. Then, these signals are transformed into the desired output format. The following steps are then processed simultaneously:

- Transformation to RGB or YUV color space
- External color adjustment
- Color adjustment as a physical balance of the spectral sensitivities

A sub-sampling of the chroma signals can be carried out to reduce the data rate of YUV signals. Here, the following items can be customized to the desired output format:

- Order of data output
- Sub-sampling of the chroma components to YUV 4:2:2 or YUV 4:1:1
- Data rate is limited to 8 bits

9.3 Color Adjustment – White Balance

The white balance is used to sensitize the camera to the color temperature of the light at the pickup location.

This feature is available on all color cameras in the Baumer VLU series, and takes place within the Bayer processor.

White balance means independent adjustment of the three color channels, red, green and blue by using a correction factor for each channel.

9.3.1 User-specific Color Adjustment

The user-specific color adjustment in Baumer color cameras means you can adjust the correction factors for each color gain. This way, you can adjust the amplification of each color channel exactly to suit your needs. The correction factors for the color gains range from 1 to 4.


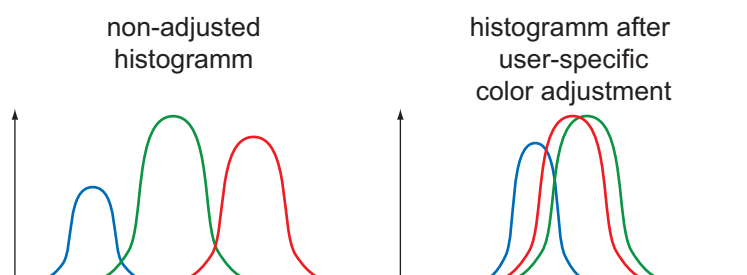


Figure 26 ►

Examples of histograms for a non-adjusted image and for an image after user-specific white balance adjustment.

9.3.2 One Push White Balance

Here, the three color spectrums are balanced to a single white point. The correction factors of the color gains are determined by the camera (one time).

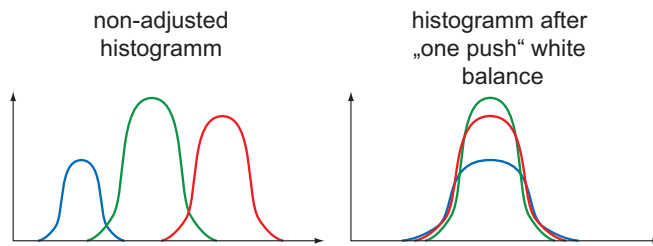

◀ **Figure 27**

Examples of histograms for a non-adjusted image and for an image after "one push" white balance adjustment.

9.4 Analog Controls

9.4.1 Offset / Black Level

CCD Sensor

On Baumer VLU cameras with CCD sensors, the offset (or black level) is adjustable from 0 to 255 LSB (relating to 12 bit).

Camera Type	Increments of 1 LSB
	Relating to
Monochrome	
VLU-02M	12 bit
VLU-12M	12 bit
Color	
VLU-02C	12 bit
VLU-12C	12 bit

CMOS Sensor

On Baumer VLU cameras with CMOS sensors, the offset (or black level) is adjustable from 0 to 255 LSB (relating to 12 bit).

Camera Type	Increments of 1 LSB
	Relating to
Monochrome	
VLU-03M	12 bit
Color	
VLU-03C	12 bit

9.4.2 Gain

In industrial environments, motion blur is unacceptable. Therefore, exposure times are limited. However, this causes low output signals from the camera and results in dark images. To solve this issue, the signals can be amplified by a user-defined gain factor within the camera. This gain factor is adjustable.

Notice

Increasing the gain factor causes an increase in image noise.

CCD Sensor

Camera Type	Gain factor [db]
Monochrome	
VLU-02M	0...29.5
VLU-12M	0...29.5
Color	
VLU-02C	0...29.5
VLU-12M	0...29.5

CMOS Sensor

Camera Type	Gain factor [db]
Monochrome	
VLU-03M	0...18
Color	
VLU-03C	0...18


9.5 Pixel Correction

9.5.1 General information


There is a certain probability of abnormal pixels - so-called defect pixels - occurring for sensors from all manufacturers. The charge quantity on these pixels is not linearly dependent on the exposure time.

The occurrence of these defect pixels is unavoidable and intrinsic to the manufacturing and aging process of the sensors.

The operation of the camera is not affected by these pixels. They only appear as brighter (warm pixel) or darker (cold pixel) spots on the recorded image.

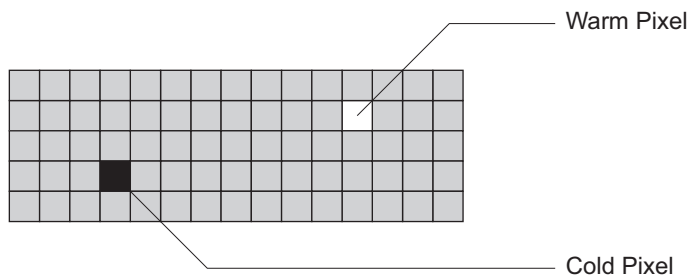

◀ **Figure 28**
Distinction of "hot" and "cold" pixels within the recorded image.

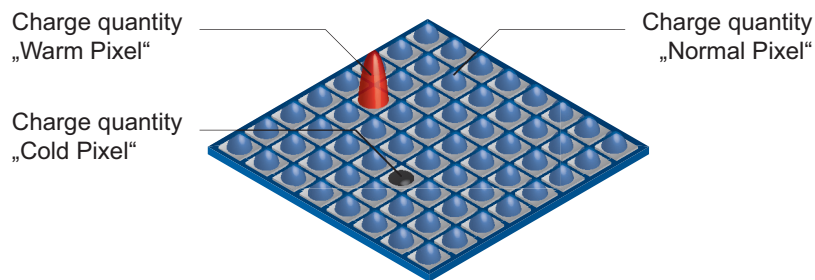


◀ **Figure 29**
Charge quantity of "hot" and "cold" pixels compared with "normal" pixels.

9.5.2 Correction Algorithm

On cameras in the Baumer VLU series, the problem of defect pixels is solved as follows:

- Possible defect pixels are identified during the camera's production process.
- The coordinates of these pixels are stored in the factory settings of the camera.
- Once the sensor readout is completed, correction takes place:
 - Before any other processing, the values of the neighboring pixels on the left and the right side of the defect pixels are read out. (within the same Bayer phase for color)
 - Then, the average value of these 2 pixels is determined to correct the first defect pixel
 - Finally, the value of the second defect pixel is corrected by using the previously corrected pixel and the pixel on the other side of the defect pixel.
 - The correction process is able to correct up to two neighboring defect pixels.

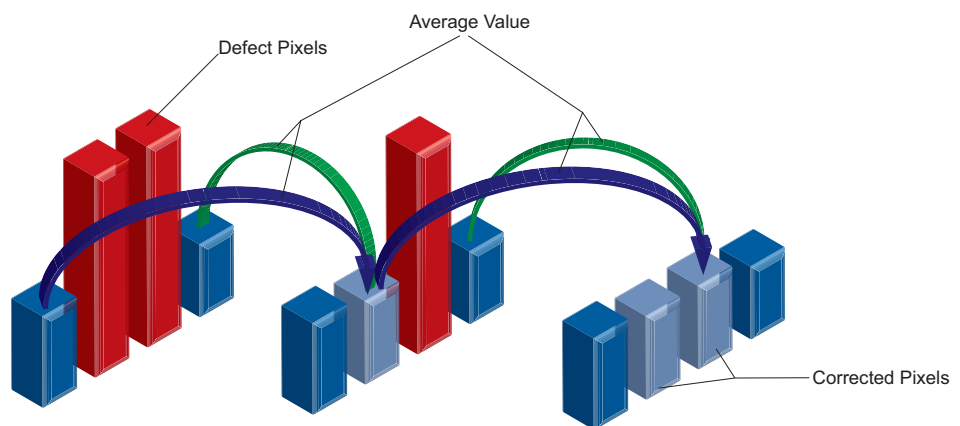

9.5.3 Defectpixellist

As stated previously, this list is determined within the production process of Baumer cameras and stored in the factory settings.

Additional hot or cold pixels can develop during the lifecycle of a camera. In this case, Baumer gives you the option to add their coordinates to the defectpixellist.

You can determine the coordinates¹⁾ of the affected pixels and add them to the list. Once the defectpixellist is stored in a user set, pixel correction is carried out for all coordinates on the defectpixellist.

1) Position in relation to Full Frame Format (Raw Data Format / No flipping).

9.6 Process Interface

9.6.1 Digital IOs

9.6.1.1 User Definable Inputs


The wiring of these input connectors is left to the user.

Sole exception is the compliance with predetermined high and low levels (0 .. 4,5V low, 11 .. 30V high).

The defined signals will have no direct effect, but can be analyzed and processed on the software side and used for controlling the camera.

The employment of a so called "IO matrix" offers the possibility of selecting the signal and the state to be processed.

On the software side the input signals are named "Trigger", "Timer" and "LineOut 1..3".

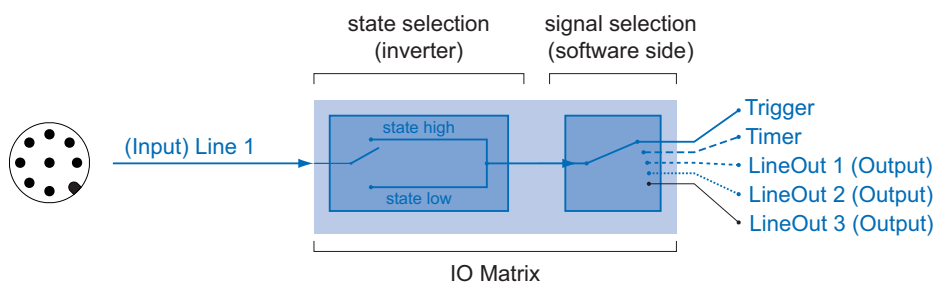

◀ **Figure 30**
IO matrix of the
Baumer VLU on the in-
put side.

9.6.1.2 Configurable Outputs

With this feature, Baumer offers the possibility of wiring the output connectors to internal signals, which are controlled on the software side.

Hereby on *VisiLine*® cameras, the output connector can be wired to one of provided internal signal: "Off", "ExposureActive", "Line 0", "Timer 1 ... 3", "ReadoutActive", "User0 ... 2", "TriggerReady", "TriggerOverlapped", "TriggerSkipped", "Sequencer Output 0 ... 2". Beside this, the output can be disabled.

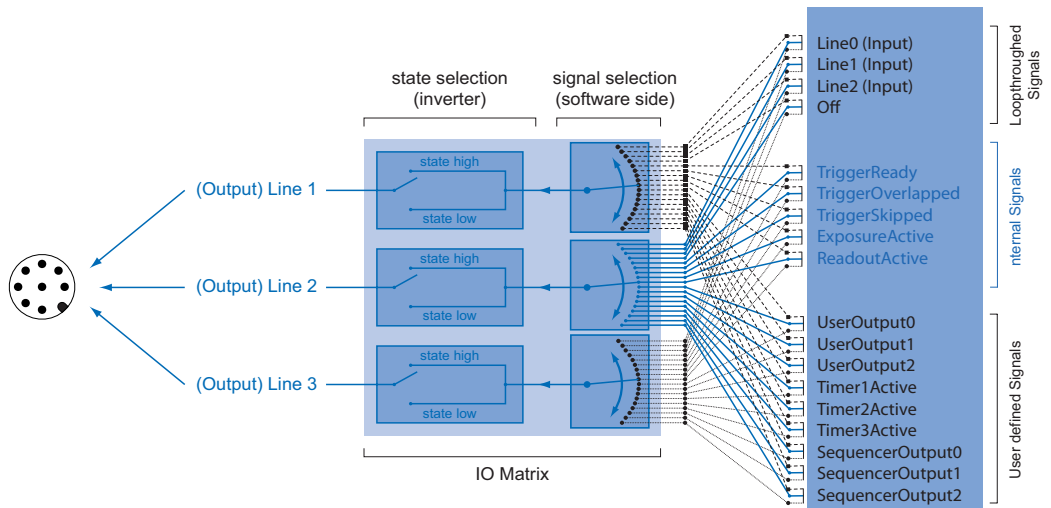


Figure 31 ►


IO matrix of the Baumer VLU on the output side.

9.6.2 IO Circuits

Notice

Low Active: At this wiring, only one consumer can be connected. When all Output pins (1, 2, 3) connected to IO_GND, then current flows through the resistor as soon as one Output is switched. If only one output connected to IO_GND, then this one is only usable.


The other three outputs are not usable and may not be connected (e.g. IO Power V_{CC})!

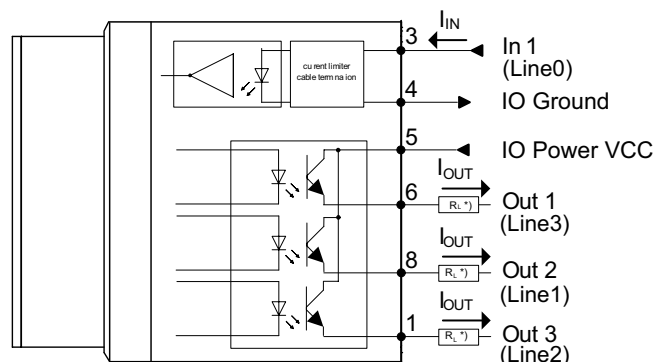


*) resistor must be used, $I_{OUT} = 16 \text{ mA}$
by $U_{EXT} = 24 \text{ VDC}$ recommended,
drawing shown above example
for using high active signal

9.6.3 Trigger

Trigger signals are used to synchronize the camera exposure and a machine cycle or, in case of a software trigger, to take images at predefined time intervals.

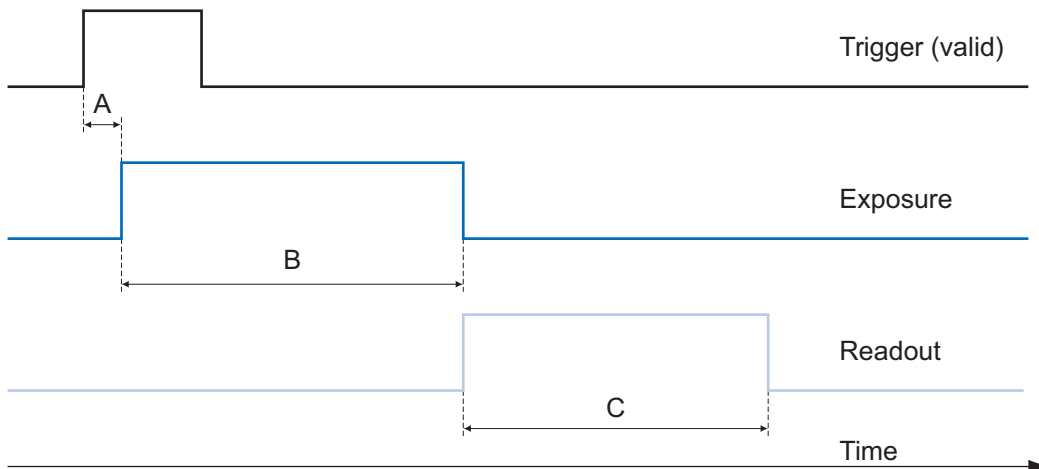

Different trigger sources can be used here.

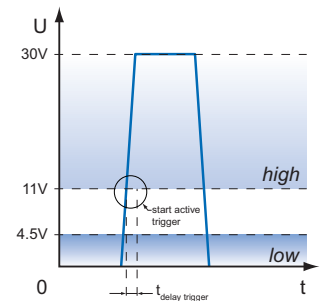

▲ Figure 32


Trigger signal, valid for Baumer cameras.

◀ Figure 33

Camera in trigger mode:

- A - Trigger delay
- B - Exposure time
- C - Readout time

9.6.4 Trigger Source

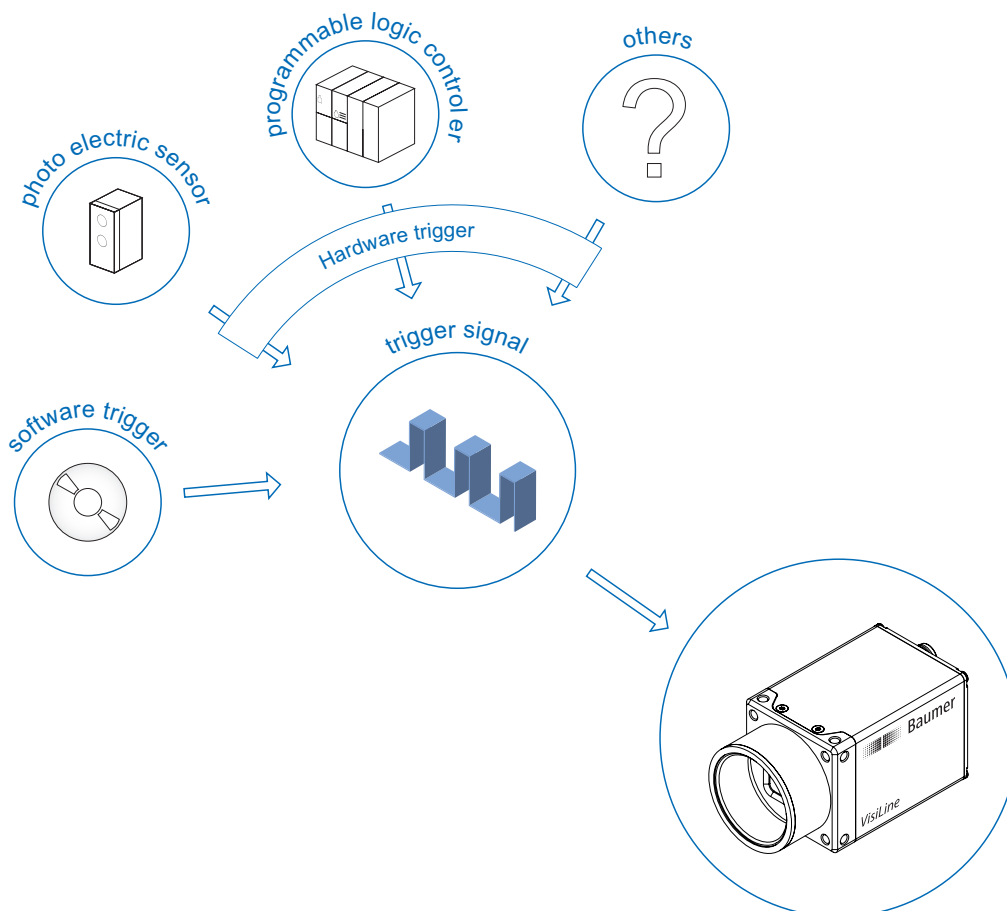

Trigger Delay:

The trigger delay is a flexible user-defined delay between the given trigger impulse and the image capture. The delay time can be set between 0.0 μsec and 2.0 sec in increments of 1 μsec . Where there are multiple triggers during the delay, the triggers will also be stored and delayed. The buffer is able to store up to 512 trigger signals during the delay.

Your benefits:

- No need for an external trigger sensor to be perfectly aligned
- Different objects can be captured without hardware changes

◀ Figure 34

Examples of possible trigger sources.

Each trigger source must be activated separately. When the trigger mode is activated, the hardware trigger is activated by default.

9.6.5 Debouncer

The basic idea behind this feature was to separate interfering signals (short peaks) from valid square wave signals, which can be important in industrial environments. Debouncing means that invalid signals are filtered out, and signals lasting longer than a user-defined testing time $t_{\text{DebounceHigh}}$ will be recognized and routed to the camera to induce a trigger.

In order to detect the end of a valid signal and filter out possible jitters within the signal, a second testing time $t_{\text{DebounceLow}}$ was introduced. The timing for this can also be adjusted by the user. If the signal value falls to state low and does not rise within $t_{\text{DebounceLow}}$, this is recognized as the end of the signal.

The debouncing times $t_{\text{DebounceHigh}}$ and $t_{\text{DebounceLow}}$ are adjustable from 0 to 5 msec in increments of 1 μsec .

Debouncer:


Please note that the edges of valid trigger signals are shifted by $t_{\text{DebounceHigh}}$ and $t_{\text{DebounceLow}}$!

Depending on these two timings, the trigger signal may be temporally stretched or compressed.

Incoming signals
(valid and invalid)

Debouncer

Filtered signal

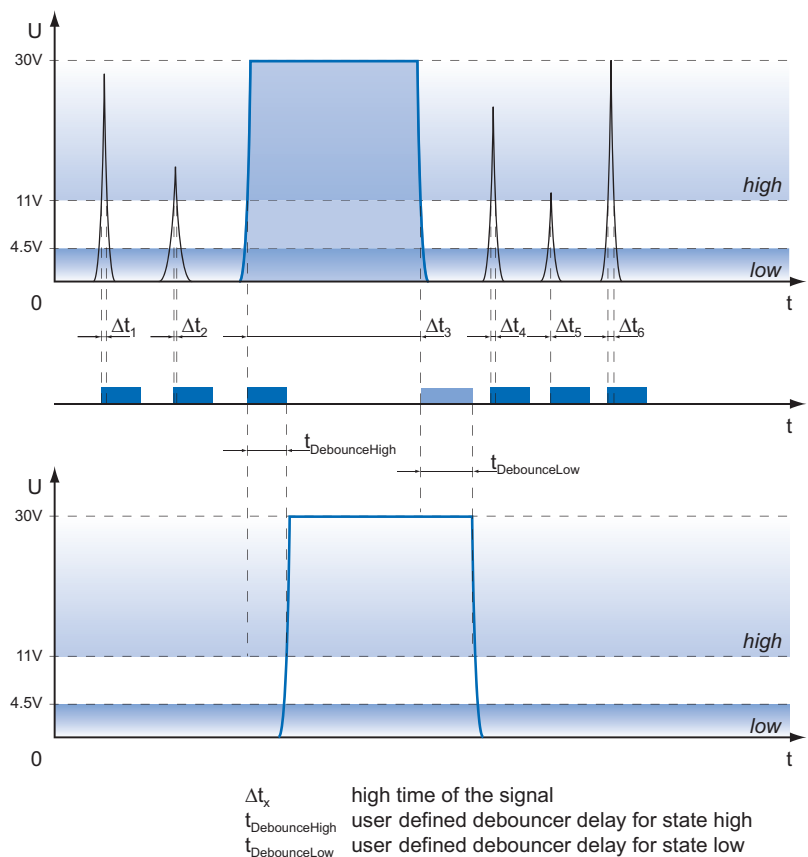

9.6.6 Flash Signal

This signal is managed by exposure of the sensor.


Furthermore, the falling edge of the flash output signal can be used to trigger a movement of the inspected objects. For this reason, the span time used for the sensor readout t_{readout} can be used in industrial environments.

9.6.7 Timers

Timers were introduced for advanced control of internal camera signals.

For example, using a timer allows you to control the flash signal in such a way that the illumination does not start synchronized to the sensor exposure but rather a predefined interval earlier.

On Baumer VLU cameras, the timer configuration includes four components:

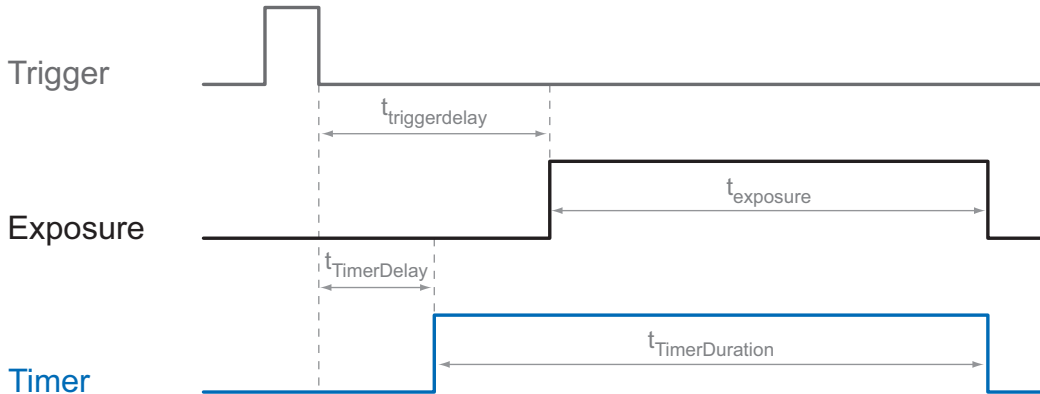

◀ **Figure 35**
Possible timer configuration on a Baumer VLU.

Component	Description
TimerTriggerSource	This feature provides a source selection for each timer.
TimerTriggerActivation	This feature selects the part of the trigger signal (edges or states) that activates the timer.
TimerDelay	This feature represents the interval between the incoming trigger signal and the start of the timer.
TimerDuration	This feature is used to adjust the activation time of the timer.

9.6.7.1 Flash Delay

As previously stated, the timer feature can be used to start the connected illumination earlier than the sensor exposure.

This implies a timer configuration as follows:

- The flash output must be wired to the selected internal timer signal.
- The trigger source and trigger activation for the timer need to be the same as for the sensor exposure.
- The TimerDelay feature ($t_{\text{TimerDelay}}$) needs to be set to a lower value than the trigger delay ($t_{\text{triggerdelay}}$).
- The duration ($t_{\text{TimerDuration}}$) of the timer signal should last until the exposure of the sensor is completed. This can be realized using the following formula:

$$t_{\text{TimerDuration}} = (t_{\text{triggerdelay}} - t_{\text{TimerDelay}}) + t_{\text{exposure}}$$

9.6.8 Frame counter

The frame counter is part of the Baumer Image Info Header and is supplied with every image, if chunk mode is activated. It is generated by hardware and can be used to verify that each of the camera's images is transmitted to the PC and received in the right order.

9.7 Sequencer

9.7.1 General Information

A sequencer is used for the automated control of series of images using different sets of parameters.

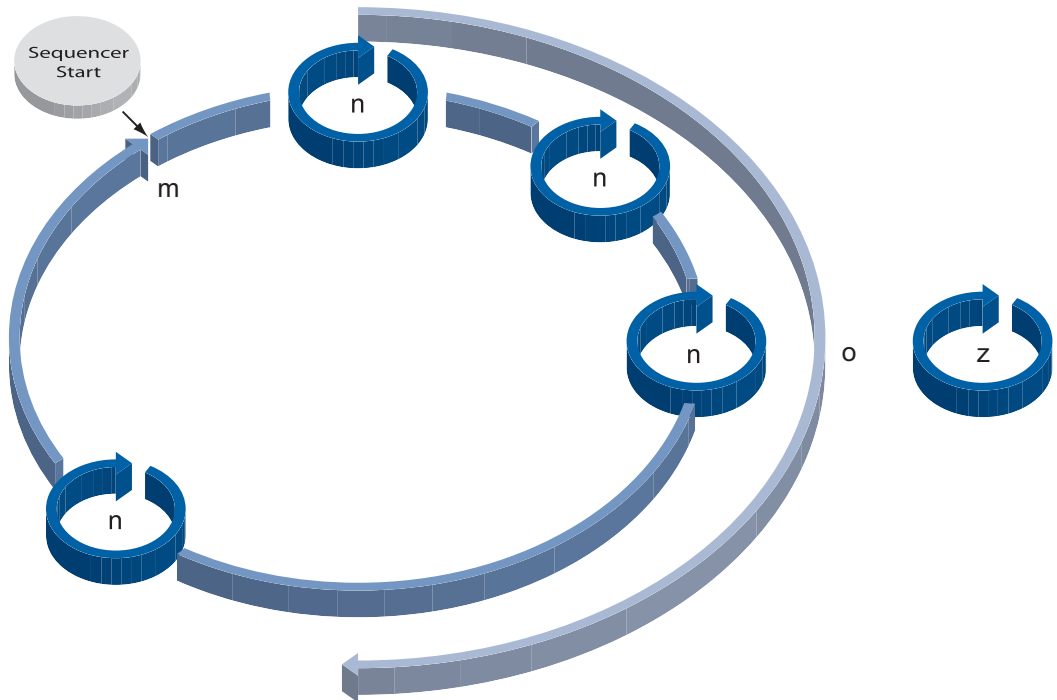


Figure 36 ►

Flow chart of sequencer.

- m - number of loop passes
- n - number of set repetitions
- o - number of sets of parameters
- z - number of frames per trigger

Sequencer Parameter:

The mentioned sets of parameters include the following:

- Exposure time
- Gain factor
- Output line
- Origin of ROI (Offset X, Y)

The figure above shows the fundamental structure of the sequencer module.

A sequence (o) is defined as a complete pass through all sets of parameters.

The loop counter (m) represents the number of sequence repetitions.

The repeat counter (n) is used to control the amount of images taken with the respective sets of parameters.

The start of the sequencer can be initiated directly (free running) or via an external event (trigger).

The additional frame counter (z) is used to create a semi-automated sequencer. It is absolutely independent from the other three counters, and used to determine the number of frames per external trigger event.

The following timeline displays the temporal course of a sequence with:

- n = 5 repetitions per set of parameters
- o = 3 sets of parameters (A,B and C)
- m = 1 sequence and
- z = 2 frames per trigger

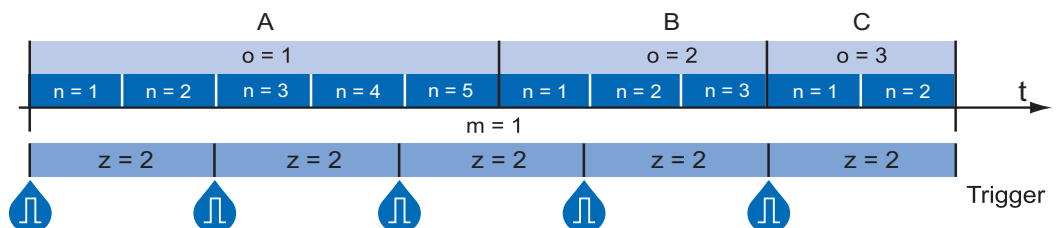


Figure 37 ►

Timeline for a single sequence


9.7.2 Baumer Optronic Sequencer in Camera xml-file

The Baumer Optronic sequencer is described in the category "BOSequencer" by the following features:

<Category Name="BOSequencer" Namespace="Custom">	
<pFeature>BoSequencerEnable</pFeature>	Enable / Disable
<pFeature>BoSequencerStart</pFeature>	Start / Stop
<pFeature>BoSequencerRunOnce</pFeature>	Run Once / Cycle
<pFeature>BoSequencerFreeRun</pFeature>	Free Running / Trigger
<pFeature>BoSequencerSetSelector</pFeature>	Configure set of parameters
<pFeature>BoSequencerLoops</pFeature>	Number of sequences (m)
<pFeature>BoSequencerSetRepeats</pFeature>	Number of repetitions (n)
<pFeature>BoSequencerFramesPerTrigger</pFeature>	Number of frames per trigger (z)
<pFeature>BoSequencerExposure</pFeature>	Parameter exposure
<pFeature>BoSequencerGain</pFeature>	Parameter gain
</Category>	

9.7.3 Examples

9.7.3.1 Sequencer without Machine Cycle

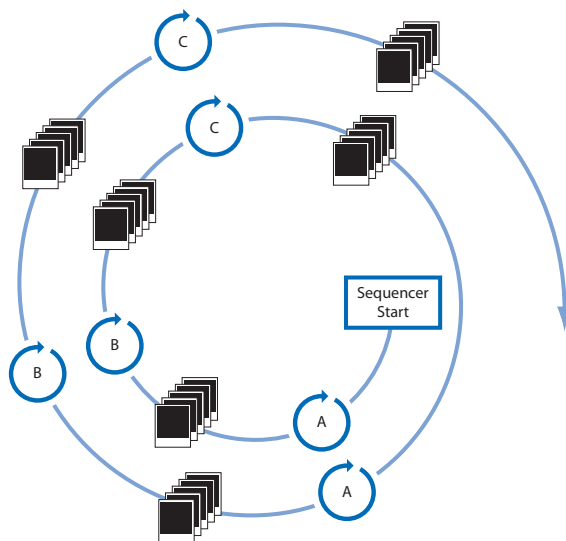

◀ **Figure 38**
Example using a fully automated sequencer.

The figure above shows an example for a fully automated sequencer with three sets of parameters (A,B and C). Here, the repeat counter (n) is set to 5 and the loop counter (m) has a value of 2.

When the sequencer is started, with or without an external event, the camera will record 5 images successively in each case, using the sets of parameters A, B and C (which constitutes a sequence). After that, the sequence is started again, then the sequencer stops - in this case the parameters are maintained.

9.7.3.2 Sequencer Controlled by Machine Steps (trigger)

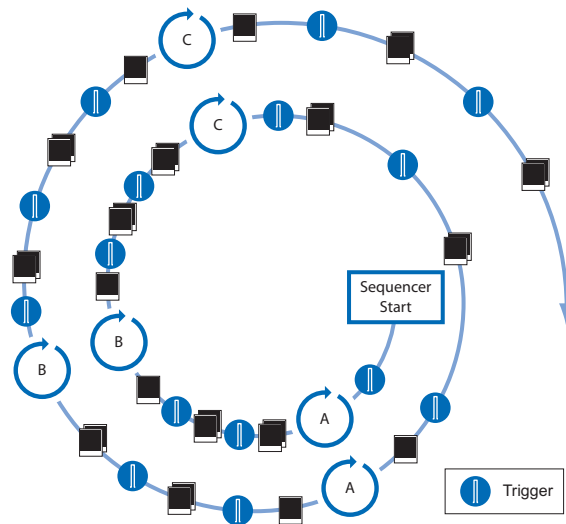


Figure 39 ▶

Example using a semi-automated sequencer.


The figure above shows an example for a semi-automated sequencer with three sets of parameters (A,B and C) from the previous example. The frame counter (z) is set to 2. This means the camera records two pictures after an incoming trigger signal.

9.7.4 Capability Characteristics of Baumer GAPI Sequencer Module

- up to 128 sets of parameters
- up to 65536 loop passes
- up to 65536 repetitions of sets of parameters
- up to 65536 images per trigger event
- free running mode without initial trigger

9.7.5 Double Shutter

This feature gives you the option to capture two images within a very short period of time. Depending on the application, this is performed in conjunction with a flash unit. The first exposure time (t_{exposure}) is arbitrary and accompanied by the first flash. The second exposure time must be equal to, or longer than the readout time (t_{readout}) of the sensor. The pixels of the sensor are therefore receptive again shortly after the first exposure. In order to realize the second short exposure time without an overrun of the sensor, a second short flash must be used, and any subsequent extraneous light prevented.

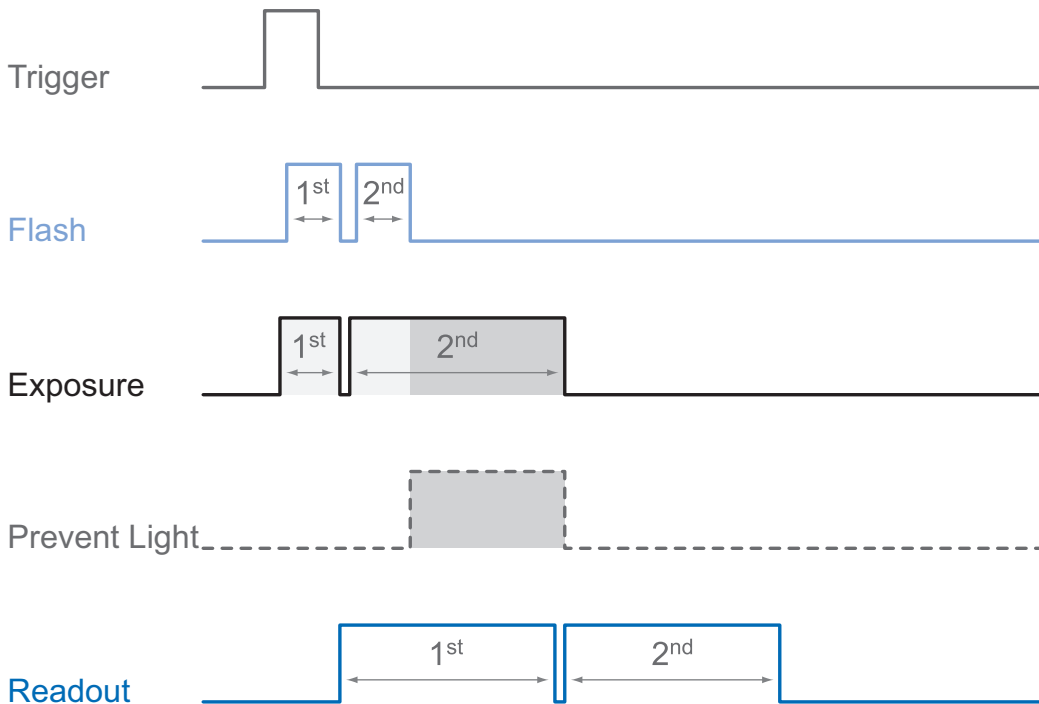

◀ **Figure 40**
Example of a double shutter.

On Baumer VLU cameras, this feature is realized within the sequencer.

In order to generate this sequence, the sequencer must be configured as follows:

Parameter	Setting:
Sequencer Run Mode	Once by Trigger
Sets of parameters (o)	2
Loops (m)	1
Repeats (n)	1
Frames Per Trigger (z)	2

9.8 Device Reset

The Device Reset feature corresponds with the turn off and turn on of the camera. The camera starts up again with the adjusted User Set.

It is therefore no longer necessary to interrupt the power supply.

9.9 User Sets

Four user sets (0-3) are available for the Baumer cameras in the VLU series. User set 0 is the default set and contains the factory settings. User sets 1 to 3 are user-specific and can contain any user-definable parameters (see table below).

These user sets are stored within the camera and can be loaded, saved and transferred to other cameras in the VLU series.

By using a so-called "user set default selector", one of the four possible user sets can be selected as the default, which means that the camera starts up with these adjusted parameters.

Parameter	
AcquisitionStart	FrameCounter
AcquisitionStop	ReadOutBuffering
AcquisitionAbort	LineInverter
AcquisitionFrameRate	LineSource
TriggerMode	UserOutputValue
TriggerSource	UserOutputValueAll
TriggerActivation	LineDebouncerHighTimeAbs
TriggerDelay	LineDebouncerLowTimeAbs
ExposureMode	EventNotification
ExposureTime	HDREnable
AcquisitionFrameRateEnable	HDRPotentialAbs
ReadoutMode	HDRExposureRatio
Gain	Width
Gamma	Height
BalanceWhiteAuto	OffsetX
BlackLevel	OffsetY
BrightnessCorrection	BinningHorizontal
BoSequencerEnable	BinningVertical
BoSequencerExposure	ReverseX
BoSequencerFramesPerTrigger	ReverseY
BoSequencerGain	PixelFormat
BoSequencerIOStatus	TestImageSelector
BoSequencerLoops	TestPattern
BoSequencerMode	LUTEnable
BoSequencerOffsetX	LUTValue
BoSequencerOffsetY	DefectPixelCorrection
Gamma	FixedPatternNoiseCorrection
BoSequencerSetNumberOfSets	TxRetryCount
BoSequencerSetRepeats	RxRetryCount
BoSequencerStart	TxCommandoLength
ChunkModeActive	RxAcknowledgeLength
ChunkEnable	Baudrate
TimerDuration	TxByteDelay
TimerDelay	TxMessageDelay
TimerTriggerSource	RxSynchronizationDelay
TimerTriggerActivation	


9.10 Factory Settings

The factory settings are stored in "user set 0", the default user set. This is the only user set that cannot be edited.

9.11 Timestamp

The timestamp is part of the USB 3.0 Vision™ standard. It is 64 bits long and denoted in nanoseconds. Any image or event includes its corresponding timestamp.

The timestamp is not resettable with a function. At power on or reset, the timestamp starts running from zero.

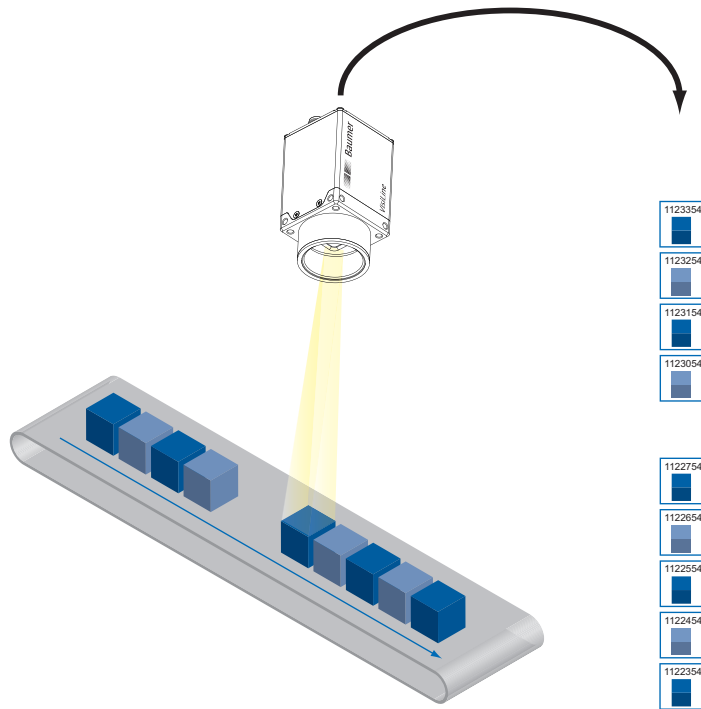

◀ **Figure 41**
Timestamps of recorded images.

10. Interface Functionalities

10.1 Device Information

This information on the device is part of the camera's USB descriptor.

Included information:


- Product ID (PID)
- Vendor ID (VID)

Model Name	Baumer USB Vendor ID [Hexadecimal]	Baumer USB Product ID [Hexadecimal]
VLU-02M	2825	010A
VLU-02C	2825	010B
VLU-03M	2825	0122
VLU-03C	2825	0123
VLU-12M	2825	010C
VLU-12C	2825	010D

- General Unique Identifier (GUID)
- Device vendor name (Manufacturer)
- Serial number (iSerialNumber)

10.2 Baumer Image Info Header (Chunk)

The Baumer Image Info Header is a data packet that is generated by the camera and integrated into the Payload (every image), if chunk mode is activated.

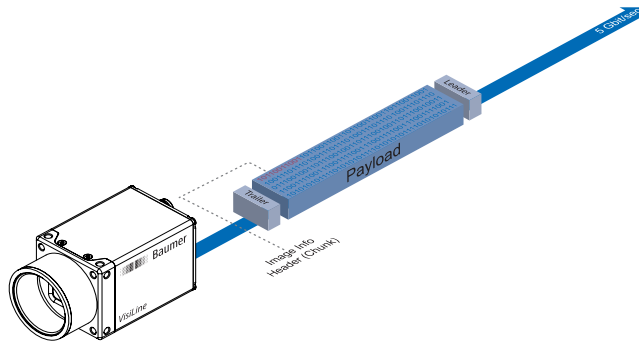

◀ **Figure 42**
Location of the Baumer
Image Info Header

This integrated data packet contains different settings for the image. Baumer GAPI can read the Image Info Header (Chunk). Third party software that supports chunk mode can read the features in the table below. These settings are (not exhaustive):

Feature	Description
ChunkOffsetX	Horizontal offset from the origin to the area of interest (in pixels).
ChunkOffsetY	Vertical offset from the origin to the area of interest (in pixels).
ChunkWidth	Returns the width of the image included in the payload.
ChunkHeight	Returns the height of the image included in the payload.
ChunkPixelFormat	Returns the pixel format of the image included in the payload.
ChunkTimestamp	Returns the Timestamp of the image included in the payload at the time of the FrameStart internal event.
ChunkExposureTime	Returns the exposure time used to capture the image.
ChunkGainSelector	Selects which Gain to retrieve data from.
ChunkGain	Returns the gain used to capture the image.
ChunkFrameID	Returns the unique Identifier of the frame (or image) included in the payload.
ChunkBinningHorizontal	Number of horizontal photo-sensitive cells to combine together.
ChunkBinningVertical	Number of vertical photo-sensitive cells to combine together.

10.3 Message Channel

The asynchronous message channel is described in the USB 3.0 Vision™ standard and allows you to signal events. There is a timestamp (64 bits) for each announced event, which contains the accurate time at which the event occurred.

Each event can be activated and deactivated separately.

10.3.1 Event Generation

Event	Description
GenICam™	
ExposureStart	Exposure started
ExposureEnd	Exposure ended
FrameStart	Acquisition of a frame started
FrameEnd	Acquisition of a frame ended
Line0Rising	Rising edge detected on IO-Line 0
Line0Falling	Falling edge detected on IO-Line 0
Line1Rising	Rising edge detected on IO-Line 1
Line1Falling	Falling edge detected on IO-Line 1
Line2Rising	Rising edge detected on IO-Line 2
Line2Falling	Falling edge detected on IO-Line 2
Line3Rising	Rising edge detected on IO-Line 3
Line3Falling	Falling edge detected on IO-Line 3
Vendor-specific	
EventDiscarded	Event discarded
EventLost	Event occurred but not analyzed
TriggerReady	t_{notready} elapsed, camera is able to process incoming trigger
TriggerOverlapped	Overlapped Mode detected
TriggerSkipped	Camera over-triggered

11. Start-Stop Behaviour

11.1 Start / Stop / Abort Acquisition (Camera)

Once image acquisition is started, three steps are processed within the camera:

- Determination of the current set of image parameters
- Exposure of the sensor
- Readout of the sensor.

Afterwards, this process is repeated until the camera is stopped.

Stopping the acquisition means that the process mentioned above is aborted. If the stop signal occurs within a readout, the current readout will be completed before the camera is stopped. If the stop signal occurs during an exposure, this will be aborted.

Abort Acquisition

The acquisition abort process is a special case where the current acquisition is stopped.

When an exposure is running, the exposure is aborted immediately and the image is not read out.

11.2 Start / Stop Interface

Transmission of image data from the camera to the PC will not proceed until the interface is started. If image acquisition is started before the interface is activated, the recorded images are lost.

If the interface is stopped during a transmission, this is aborted immediately.

11.3 Acquisition Modes

In general, three acquisition modes are available for the cameras in the Baumer VLU series.

11.3.1 Free Running

Free running means the camera records images continuously without external events.

11.3.2 Trigger

The basic idea behind the trigger mode is the synchronization of cameras with machine cycles. Trigger mode means that image recording is not continuous, but rather triggered by external events.

11.3.3 Sequencer

A sequencer is used for the automated control of series of images, using different settings for exposure time and gain.

12. Cleaning

Cover glass

Notice

The sensor is mounted dust-proof. Remove of the cover glass for cleaning is not necessary.

Avoid cleaning the cover glass of the sensor glass if possible. To prevent dust, follow the instructions under "Install lens".

If you must clean it, use compressed air or a soft, lint free cloth dampened with a small quantity of pure alcohol.

Housing



Caution!



Volatile solvents for cleaning.

Volatile solvents damage the surface of the camera.

Never use volatile solvents (benzine, thinner) for cleaning!

To clean the surface of the camera housing, use a soft, dry cloth. To remove persistent stains, use a soft cloth dampened with a small quantity of neutral detergent, then wipe dry.

13. Transport / Storage


Notice

Transport the camera only in its original packaging. When the camera is not installed, store it in its original packaging.

Storage Environment


Storage temperature	-10°C ... +70°C (+14°F ... +158°F)
Storage Humidity	10% ... 90% non condensing

14. Disposal



Do not dispose of outdated products with electrical or electronic circuits in your normal domestic waste, but rather according to your national law and the directives 2002/96/EC and 2006/66/EC for recycling electronic waste.

The proper disposal of obsolete equipment will help to save valuable resources and prevent possible adverse effects on human health and the environment.



Returning the packaging to the material cycle helps conserve raw materials and reduces the production of waste. When no longer required, dispose of the packaging materials in accordance with the local regulations in force.

Keep the original packaging during the warranty period in order to be able to pack the device properly in the event of a warranty claim.

15. Warranty Notes

Notice

If it is obvious that the device is / was dismantled, reworked or repaired by anyone other than Baumer technicians, Baumer Optronic will not take any responsibility for the subsequent performance and quality of the device!

16. Support

If you have any problems with the camera, feel free to contact our support.

Worldwide

Baumer Optronic GmbH

Badstrasse 30

DE-01454 Radeberg, Germany

Tel: +49 (0)3528 4386 845

Email: support.cameras@baumer.com

Website: www.baumer.com

17. Conformity



Cameras of the Baumer VLU family comply with:

- CE
- RoHS

17.1 CE

We declare, under our sole responsibility, that the previously described Baumer VLU cameras conform with the directives of the CE.

17.2 RoHS

All VLU cameras comply with the recommendation of the European Union concerning RoHS Rules.



Baumer Optronic GmbH

Badstrasse 30

DE-01454 Radeberg, Germany

Phone +49 (0)3528 4386 0 · Fax +49 (0)3528 4386 86

sales@baumeroptronic.com · www.baumer.com